


 



 


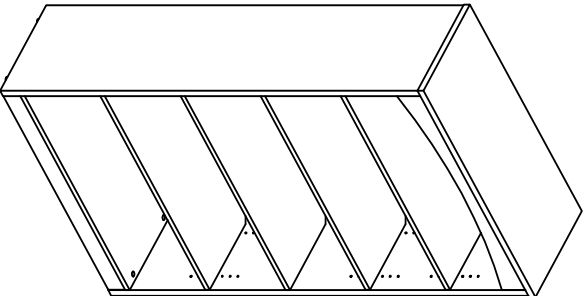



**Brighton Series™**  
**Bookcase**  
**Model No. BTB5S36**



**ASSEMBLY INSTRUCTIONS**  
**CALL 1-800-822-8037 FOR ASSISTANCE**

P/N **BTB5S36** Rev. 01 04/09

# PARTS LIST

Name	Part	Qty.	Spare Qty	Name	Part	Qty.	Spare Qty
<b>A</b>	 <b>REALS004</b> Wood Dowel	<b>22</b>	<b>1</b>	<b>G</b>	 <b>REALBY021</b> Shelf Support	<b>12</b>	
<b>B</b>	 <b>REALS001</b> Cam Lock	<b>36</b>	<b>1</b>	<b>H</b>	 <b>REALBY009</b> M3.5 x 14mm Black	<b>16</b>	<b>1</b>
<b>C</b>	 <b>REALS003</b> Cam Post	<b>36</b>	<b>1</b>	<b>J</b>	 <b>REALBY008**</b> Hole Cap 15mm	<b>4</b>	<b>1</b>
<b>D</b>	 <b>REALBY005**</b> Cam Sticker	<b>36</b>	<b>1</b>	<b>K</b>	 <b>REALBY028</b> Wrench	<b>1</b>	
<b>E</b>	 <b>REALBY016</b> Grommet 35mm	<b>2</b>			 <b>BTBSHB</b>	<b>1</b>	
<b>F</b>	 <b>REALBY018</b> Leveler (50H)	<b>4</b>					

Items with HB are in hardware box.  
\*\*Denotes Color Code


# PARTS LIST

Name	Part	Qty.	Name	Part	Qty.
<b>N</b>	<b>BTBS36N**</b> Top	<b>1</b>	<b>T</b>	<b>BTBS36T**</b> Fixed Shelf	<b>1</b>
<b>P</b>	<b>BTBS36P**</b> Left Side Panel	<b>1</b>	<b>U</b>	<b>BTBS36U**</b> Adjustable Shelf	<b>3</b>
<b>Q</b>	<b>BTBS36Q**</b> Right Side Panel	<b>1</b>	<b>V</b>	<b>BTBS36V**</b> Fascia	<b>1</b>
<b>R</b>	<b>BTBS36R**</b> Back Panel	<b>1</b>	<b>W</b>	<b>BTBS36W**</b> Toe Kick	<b>1</b>
<b>S</b>	<b>BTBS36S**</b> Bottom	<b>1</b>	<b>X</b>	<b>BTBS36X**</b> Bottom Support	<b>1</b>

\*\*Denotes Color Code

**2**


- 1 Insert Dowel (A) into Bottom Support (X). Install Cam Post (C) in to the underside of the Bottom (S) and the backside of the Toe Kick (W). Fasten the Toe Kick (W), Bottom Support (X) and Bottom (S) by turning Cams (B).

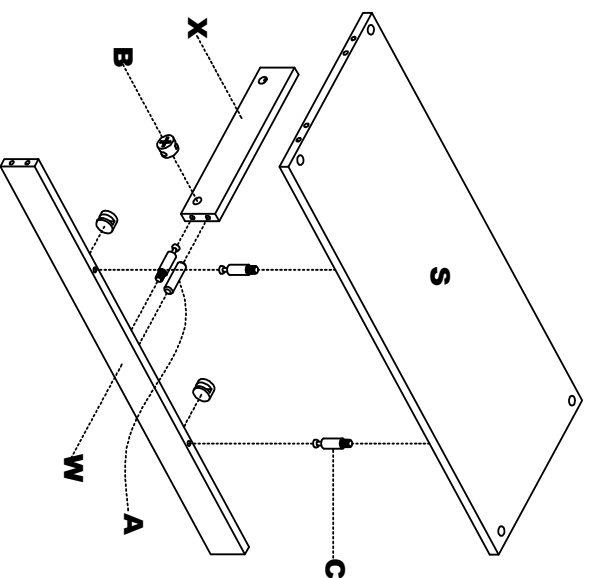

NOTE: The arrow on the face of the Cam (B) should point towards the Cam Post (C) for proper alignment.


**3**

- 2** Insert Dowel (A) into Bottom Support (X). Install Cam Posts (C) into threaded inserts in Back Panel (R). Insert Cam (B) into the Fixed Shelf (T), Bottom (S) and Bottom Support (X). Align the Fixed Shelf (T) and the Bottom Assembly with the Cam Posts (B) in the Back Panel (R) and lower into position. Fasten Fixed Shelf (T) and Bottom Assembly to the Back Panel (R) by turning Cam (B).

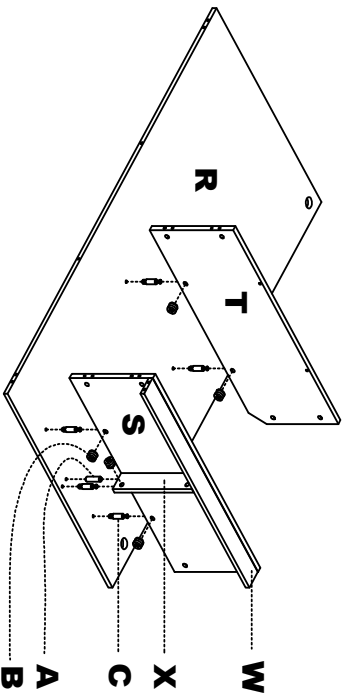


**4**

- 3** Insert Dowels (A) and Cam (B) into Fascia (V), Fixed Shelf (T), Bottom (S), Toe Kick (W) and Back Panel (R). Install Cam Posts (C) into the Side Panels (P & Q). Fasten Side Panels (P & Q) to Fascia (V), Fixed Shelf (T), Bottom (S), Toe Kick (W) and Back Panel (R) by turning Cam (B).

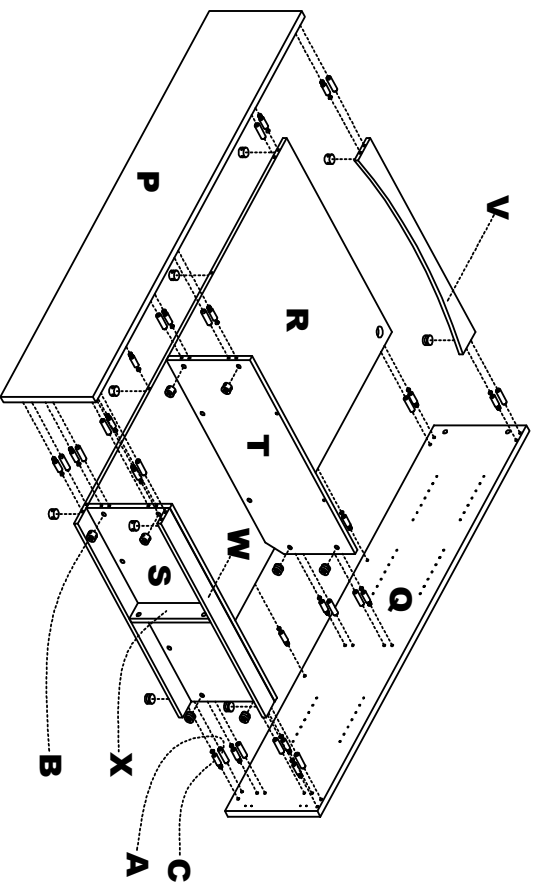



**5**

- 4** Attach Leveler Assembly (F) to the Side Panels (P & Q) using Screws (H).

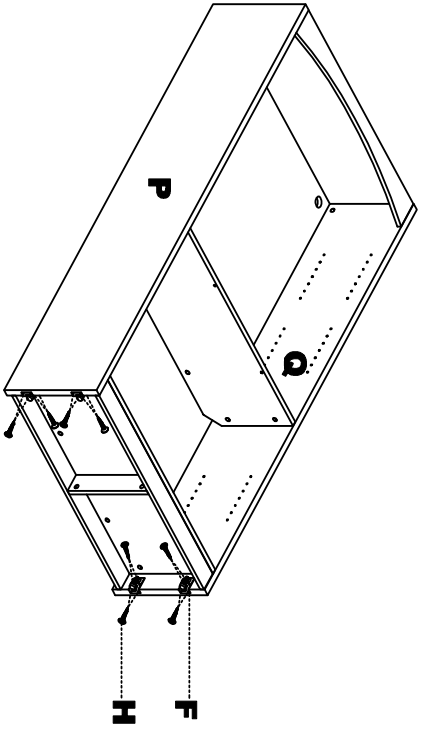

**6**

- 5** Insert Dowels (A) and Cambs (B) into Fascia (V), Back Panel (R), and Side Panels (P & Q). Install Cam Posts (C) into the Top (N). Fasten Top (N) to Side Panels (P & Q), Fascia (V) and Back Panel (R) by turning Cambs (B). Insert Shelf Supports (G) into the Side Panels (P & Q) at the desired height. Insert Grommets (E) into the Back Panel (R). Adhere the Cam Stickers (D) to exposed Cambs (B).

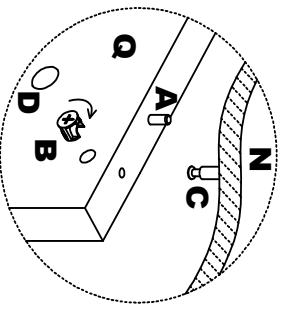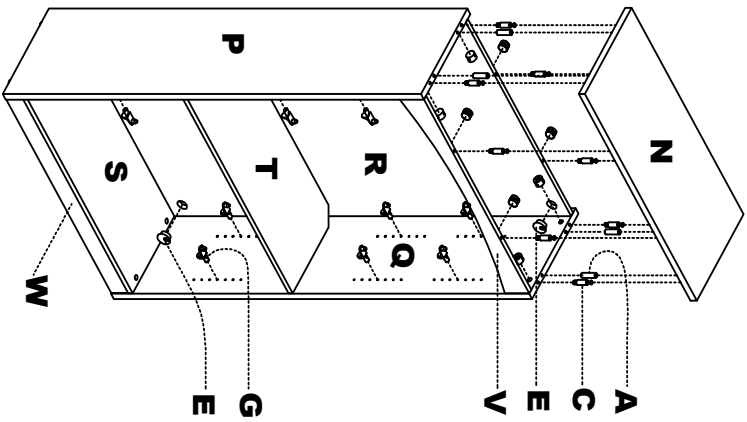

**7**

- 6** Place Bookcase at desired location and level Bookcase using Wrench (K). Insert Hole Cap (J) into Leveler access holes in Bottom (S). Install Adjustable Shelves (U).

