




CSII BOOKCASE

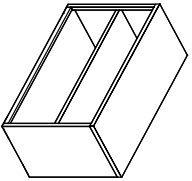


CATALOG No:
CBC2

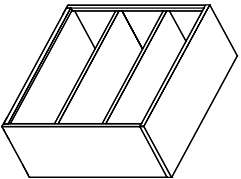

CATALOG No:
CBC3

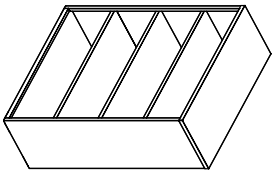

CATALOG No:
CBC4

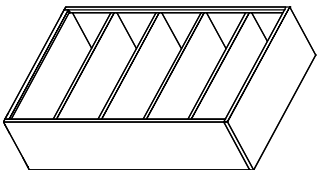





CATALOG No:
CBC5

ASSEMBLY INSTRUCTIONS
CALL 1-800-822-8037 FOR ASSISTANCE

P/N **CBC** 08/24/09

PARTS LIST

Model	Name	Part	Qty.	Qty.	Qty.	Qty.	
CBC2							
CBC3							
CBC4							
CBC5							
	A		HB	4	8	12	16
		Shelf Clip					
	B		HB	4	4	4	4
		Sheet Metal Screw					
	C		HB	4	4	4	4
		Glide					
 <p>CBC Replacement Hardware Box for all models</p>							

Items with HB are in hardware box.





PARTS LIST


Name	Part	Qty.
F	CBCBTA** Tube Assembly	2
G	CBC~RS** R.H. Side Panel	1
H	CBC~LS** L.H. Side Panel	1
J	CBCB** Bottom Panel	1
K	CBCBP** Back Panel	Qty.
		CBC2
		CBC3
		CBC4
		CBC5

Name	Part	Qty.
L	CBCUBP** Top Back Panel	1
M	CBCT** Top Panel	1
N	CBCS** Adjustable Shelf	Qty.
		CBC2
		CBC3
		CBC4
		CBC5

**Denotes Color Code
~~Denotes Size


IMPORTANT: These instructions are provided to avoid problems that may occur from improper assembly. The manufacturer and/or distributor are not responsible for failure resulting from improper assembly or installation. Moreover, all warranties are void for failure to follow these assembly instructions.

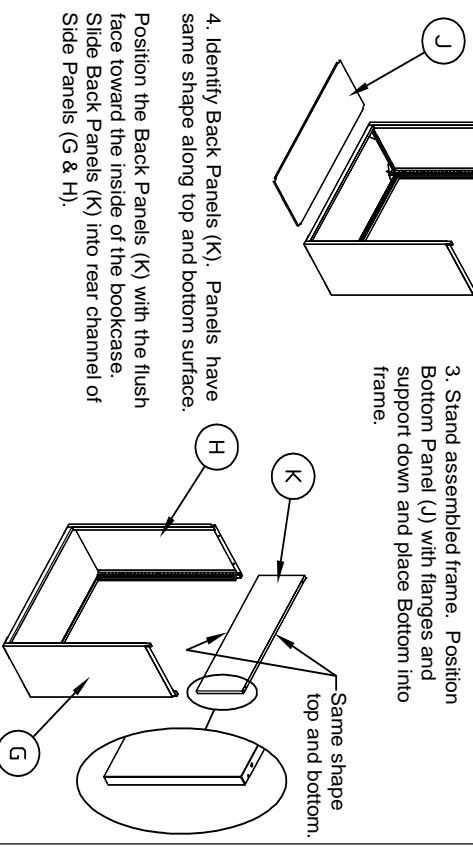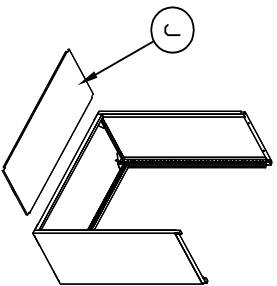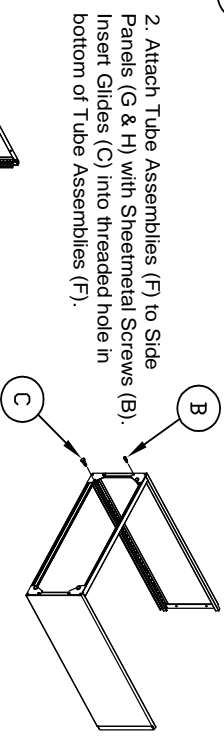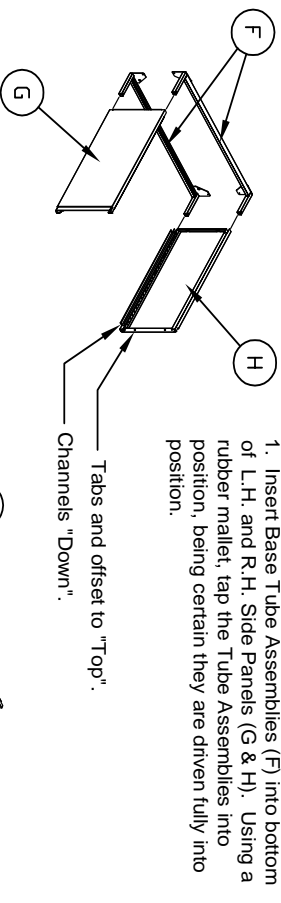

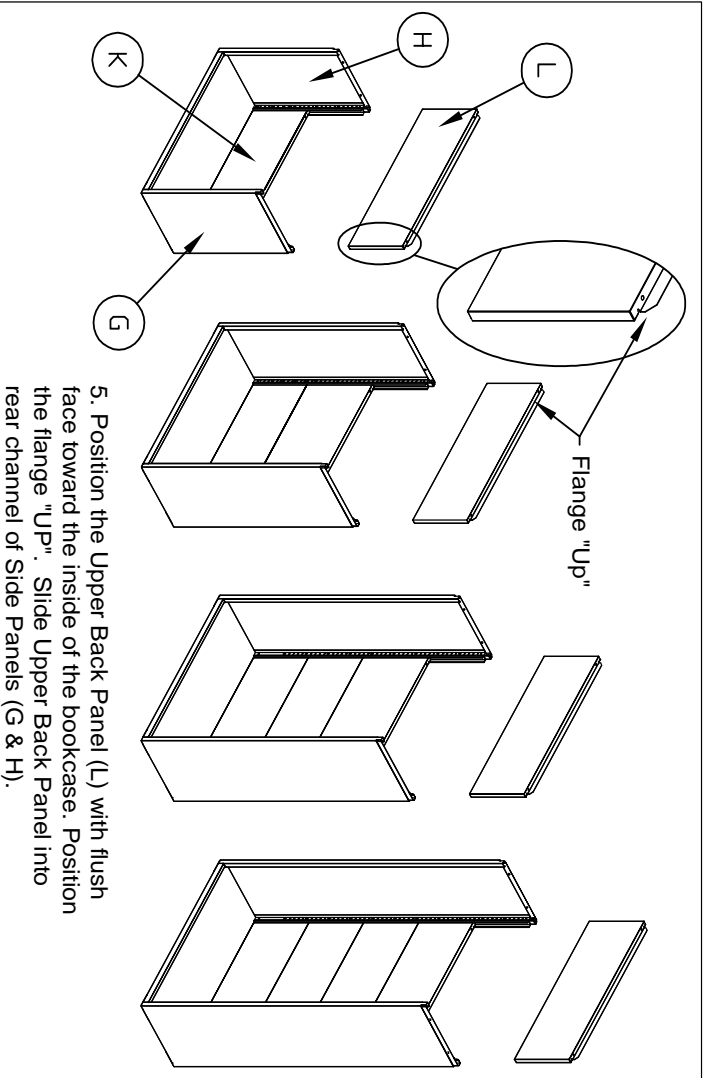


5. Position the Upper Back Panel (L) with flush face toward the inside of the bookcase. Position the flange "UP". Slide Upper Back Panel into rear channel of Side Panels (G & H).

6. Press the Top Panel (M) onto the assembled bookcase till the Side Panel tabs engage.

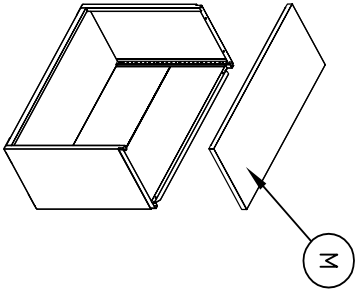

7. Position the Shelf Clips (A) with the flat surface "UP".

Insert Shelf Clip hook into the side panel slots at the desired location and rotate clip down.

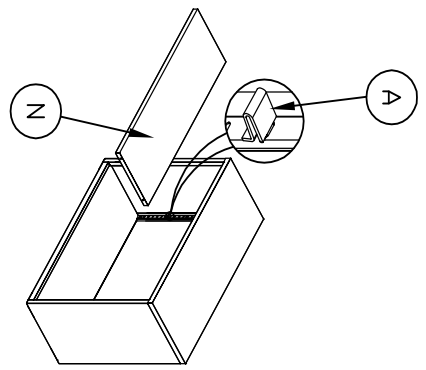

8. Install Adjustable Shelves (N).