


## USER MANUAL

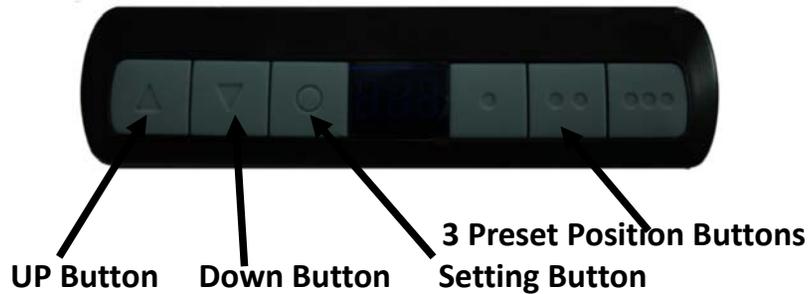

- ⚠ Make sure no obstacles are in the desk's path.
- ⚠ Make sure the desktop is not touching any walls.
- Make sure all cords are appropriate length to accommodate the change in height.

**IMPORTANT:** You must **INITIALIZE** the desk prior to use.

**INITIALIZATION PROCEDURE:** Press and hold the **Down Button** on the handset until the desk reaches its lowest height, slightly rises and stops. Release the Down Button. Your desk is now ready to use.

**Up and Down:** Press the **UP Button**, the legs will move up; Press **DOWN Button**, the legs will move down; release to stop movement.

**Multiple Programmable Positions:** Set table at a desired preset height, Press the **SETTING Button** and one of the **3 PRESET POSITION** buttons to preset a desired height. There are total 3 presets available. When you program each of the 3 preset positions, the LED will show "1CF", "2CF", "3CF" to confirm the setting for each of these 3 positions, accordingly.

**Programmable Height Limits:** Set table at a desired upper height limit, press the **SETTING Button and UP button** at the same time for 1 second, the LED will show "HCF", the upper limit is confirmed. To cancel the upper limit setting, press the same buttons again, the LED will show "HCL", the upper limit is canceled; Set table at a desired lower height limit, Press the **SETTING Button and DOWN Button** at the same time for 1 second, the LED will show "LCF", the lower limit is confirmed. To cancel the lower limit, press the same buttons again, the LED will show "LCL", the lower limit is canceled.

**Programmable Speeds:** Set table at a desired speed, Press the **SETTING Button** for about 7S, The LED will show the default speed "SP2"(Factory setting 35mm/second). Press **UP Button** to change to higher speed (40mm/second); Press **DOWN Button** to change to lower speed (25mm/second)

**Programmable Units of Measurements (inches or CMs):** Set table at a desired unit of measurement (CM and IN), press **SETTING Button** for about 7 seconds, the LED will show "SP2", then press the first **PRESET POSITION Button**, the LED will show default unit "CM" or "IN", then press **UP or DOWN Button** to change the Unit show.

**Maintenance:** Apply a silicone lubricant to the legs should any noise or vibration occur.

### WARNING (OVERHEATING)

To avoid overheating, a protection program is built into the system, the legs are limited to be moved up and down continuously for a maximum 2 minutes within any 20 minute period. If the unit overheats, the LED will show "HOT" or "ERR".

## TROUBLESHOOTING

If the table is not functioning properly it may need to be reset. Unplug the power cord for 20 seconds. Plug the power cord back in and follow the RESET procedures;

If the error message persists after the reset procedure, please contact your dealer;

If the height between the legs exceeds 1.5 inches, stop the reset procedure, please contact your dealer;

**Reset Procedure:** Press and hold the **DOWN Button** on the handset until the desk reaches its lowest height, slightly rises and stops. Release the Down Button. Your desk is now ready to use.

The Fuse Failure: The black transformer box for 2 legs accept a 5A fuse, 3 legs accept a 6.3A fuse. Should the unit fail to operate, please check the condition of the fuse, it may need to be replaced. See picture for fuse house:

