




TransAction™

Double Sided Starter Workstation
Power Kits

TAETKD48SS, TAETKD60SS &
TAETKD72SS


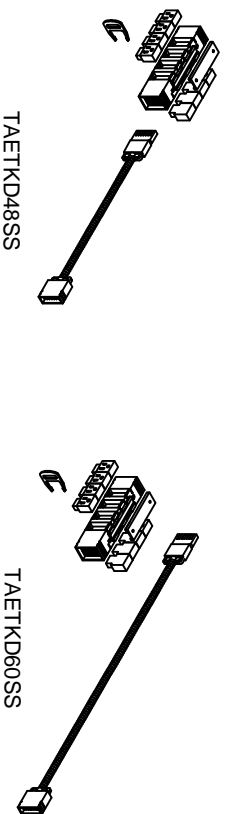





 


ASSEMBLY INSTRUCTIONS
CALL 1-800-822-8037 FOR ASSISTANCE

P/N **TAETKDSS** 10/13/11

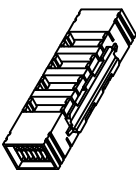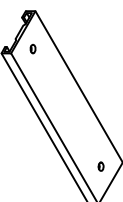www.mayline.com

PARIS LISI


Name	Part	Qty.
A	 Power Block	1
B	 Mounting Bracket	1
C	 Pass Thru Cable, 12" (48" Tables)	1
	 Pass Thru Cable, 24" (60" Tables)	
	 Pass Thru Cable, 36" (72" Tables)	

Name	Part	Qty.
D	 Receptacle	8
E	 Screw #8-32 x 3/8	2
F	 Removal Tool	1


IMPORTANT:
Read all instructions before beginning job. These instructions are provided to avoid problems that may occur from improper assembly. The manufacturer and/or distributor are not responsible for failure resulting from improper assembly or installation. Moreover, all warranties are void for failure to follow these assembly instructions.

NOTE: Power infeed should be installed by a licensed electrician in accordance with local building codes.


1. Install mounting bracket (B) to underside of table beam using screws (E).

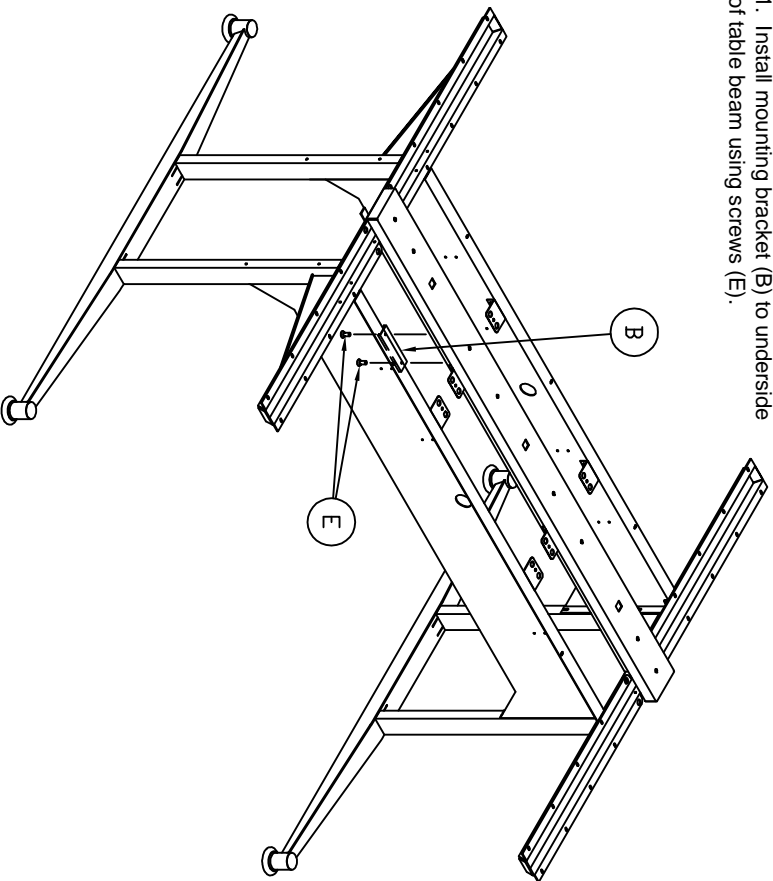

2. Snap receptacles (D) into power block (A).

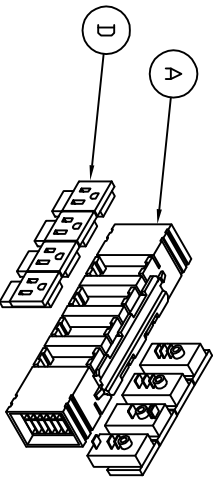

3. Slide power block (A) into mounting bracket (B).

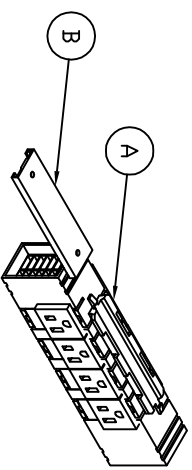

4. Connect power blocks (A) using interconnect cables (C) or infeed (sold separately).

