

 


TransAction™


Single Sided Starter Workstation

Power Kits


TAETKS48SS, TAETKS60SS & TAETKS72SS

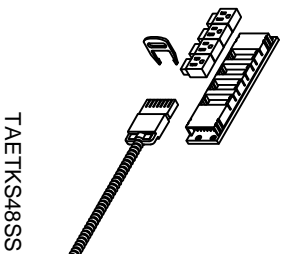

TAETKS48SS

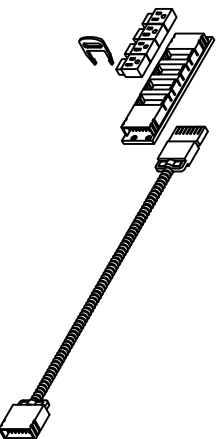 

TAETKS60SS

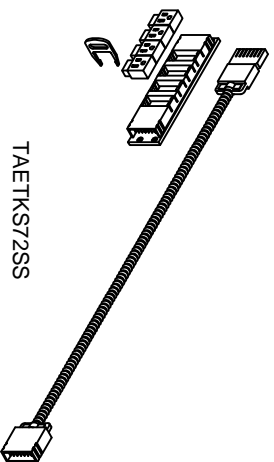 

TAETKS72SS





ASSEMBLY INSTRUCTIONS




CALL 1-800-822-8037 FOR ASSISTANCE

P/N **TAETKSSS** 10/13/11

 www.mayline.com

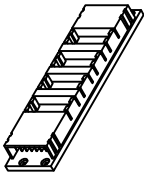PARIS LISI


Name	Part	Qty.	
A		1	
	Power Block		
	Pass Thru Cable, 12" (48" Tables)		
B	Pass Thru Cable, 24" (60" Tables)		1
	Pass Thru Cable, 36" (72" Tables)		

  Name	Part	Qty.
C		4
	Receptacle	
D		4
	Screw #8-32 x 3/8	
E		1
	Removal Tool	


IMPORTANT:
Read all instructions before beginning job. These instructions are provided to avoid problems that may occur from improper assembly. The manufacturer and/or distributor are not responsible for failure resulting from improper assembly or installation. Moreover, all warranties are void for failure to follow these assembly instructions.

NOTE: Power infeed should be installed by a licensed electrician in accordance with local building codes.

 1. Snap receptacles (C) into power block (A).

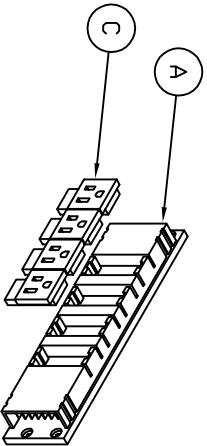

 2. Install power block (A) on the inside of the trough side using screws (D).

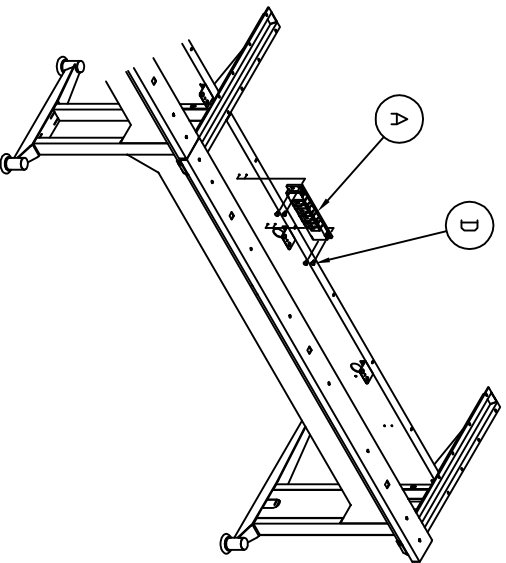

3. Connect power blocks (A) using interconnect cables (B) or infeed (sold separately).

