










**ASSEMBLY INSTRUCTIONS**  
**SWIVEL TASK STOOL**  
**MODEL NO. 6005AG**

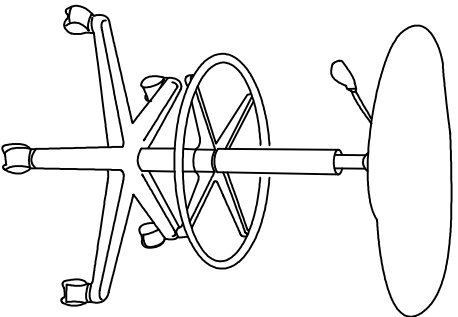


**PARTS LIST 6005AG**

When ordering components, specific color and/or size information may be required.  
 Contact a Mayline Customer Service Representative. 1-800-822-8037  
 \* Individual Items, Order by part number. \*\* Denotes Color Code

Reference Letter	Quantity
<b>A</b> *	<b>1</b>
Part Number CM418** Seat	
Reference Letter	
<b>B</b> *	<b>1</b>
Part Number CM424 Mechanism	
Reference Letter	
<b>C</b> *	<b>5</b>
Part Number CM210 Castor (5 per pack)	
Reference Letter	
<b>D</b> *	<b>1</b>
Part Number CM441 Base	
Reference Letter	
<b>E</b> *	<b>1</b>
Part Number CM482 Cylinder	
Reference Letter	
<b>F</b> *	<b>1</b>
Part Number CM460 Foot Ring	

Part Number	Quantity	Spare
CM457 * Hardware Pack		
Reference Letter		
<b>G</b>	<b>4</b>	<b>1</b>
Screw MX x Xmm		
Reference Letter		
<b>H</b>	<b>1</b>	
Allen Wrench		

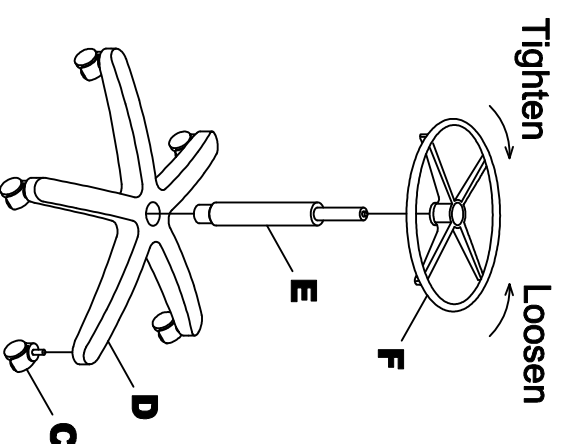


1. Place Base (D) upside down and push Casters (C) firmly into base. 5 places.
2. Turn Base right side up and insert Cylinder (E) into center hole of Base.
3. Place Foot Ring (F) over Cylinder. See Operating Instructions.

**IMPORTANT!**

**Review ALL instructions before beginning assembly.** These instructions are provided to avoid problems that may occur from improper assembly or installation. Mayline and/or its distributor are not responsible for failure resulting from improper assembly or installation of this product. Moreover, all warranties are void for failure to follow these assembly instructions.




**MAYLINE**  
 Mayline Company, LLC  
 619 N. Commerce, P.O. Box 728  
 Shakopee, MN 55082-0728  
 Toll Free: 1-800-822-8037  
 FAX: 920-457-7388  
 On Line: [www.mayline.com](http://www.mayline.com)

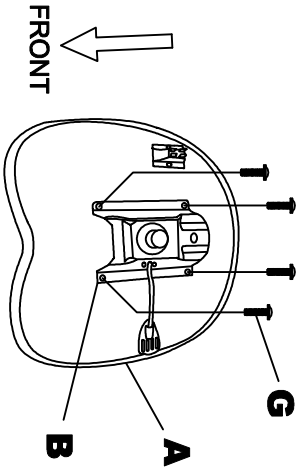

4. Assemble Mechanism (B) to Seat (A) using Screws (G) 4 places.

5. Carefully place seat assembly onto base assembly.

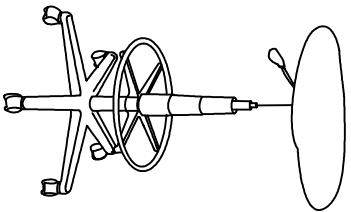

**NOTE:**  
Periodically (Every 90 days) make sure all screws are fully tightened.

## OPERATING INSTRUCTIONS FOR MECHANISM & CHAIR FEATURES

### 1. Seat Height Adjustment.

To raise the seat, pull lever upward and raise your body up slightly to allow the chair to rise to the desired height.

To lower the seat, pull lever upward and apply weight downward on the seat.

### 2. Foot Ring Adjustment.

Turn foot ring counter-clockwise to loosen. Place to desired height and turn clockwise to tighten.

