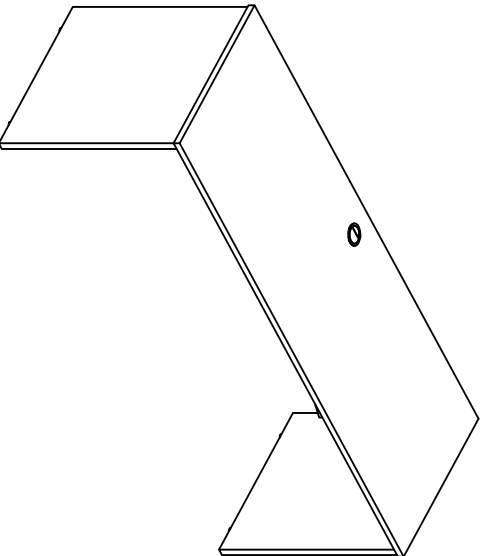









**Brighton Series™
Credenza Shell**

Model No. BTCD7224, BTCD6624, BTCD6024



ASSEMBLY INSTRUCTIONS
CALL 1-800-822-8037 FOR ASSISTANCE





PARTS LIST

Name	Part	Qty.	Spare Qty	Name	Part	Qty.	Spare Qty
A	 REALBY004 Wood Dowel HB	8	1	E	 REALBY015 Grommet 60mm HB	1	
B	 REALS001 Cam Lock HB	12	1	F	 REALBY017 Leveler HB	4	
C	 REALS003 Cam Post HB	12	1		 BTDHB		
D	 REALBY005** Cam Sticker HB	12	1				

Items with HB are in hardware box.

**Denotes Color Code

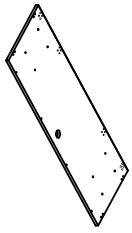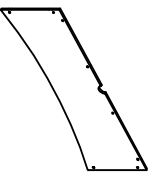
PARTS LIST

Name	Part	Qty.	Name	Part	Qty.
K	 BTCD~~24K** Top	1	M	 BTCD24M** Right Side Panel	1
L	 BTCD24L** Left Side Panel	1	N	 BTCD~~N** Modesty Panel	1

**Denotes Color Code
~~Indicates (72, 66 or 60)

2

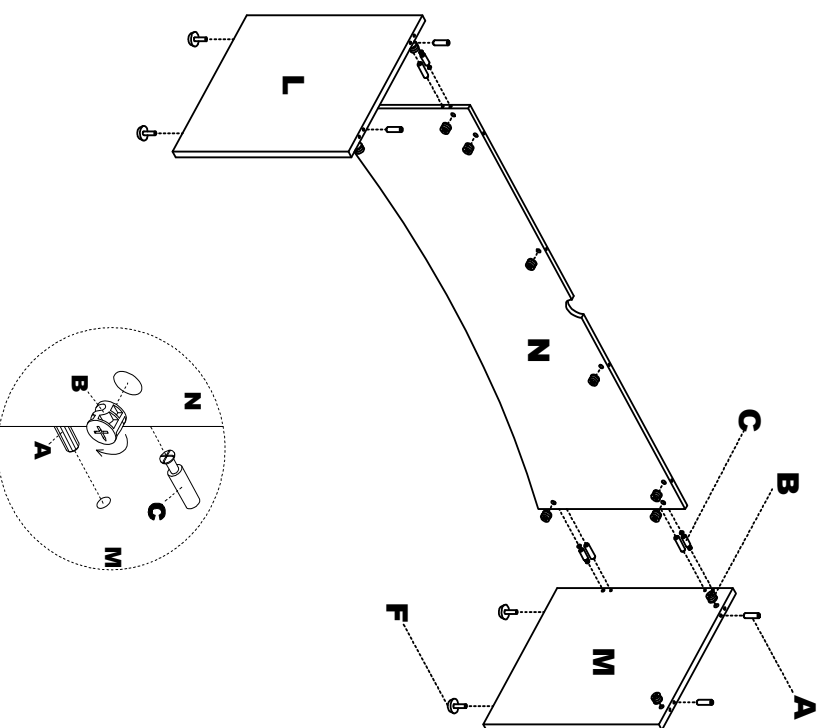
- 1** Insert Wood Dowels (A) into Modesty Panel (N) and the top of the Side Panels (L & M). Insert Cam (B) into the Modesty Panel (N) and Side panels (L & M). Install Cam Posts (C) into threaded inserts in Side Panels (L & M). Install Levelers (F) into bottom of Side Panels (L & M). Attach Modesty Panel (N) to Side Panels (L & M) by turning Cam (B).



NOTE: The arrow on the face of the Cam (B) should point towards the Cam Post (C) for proper alignment.


3

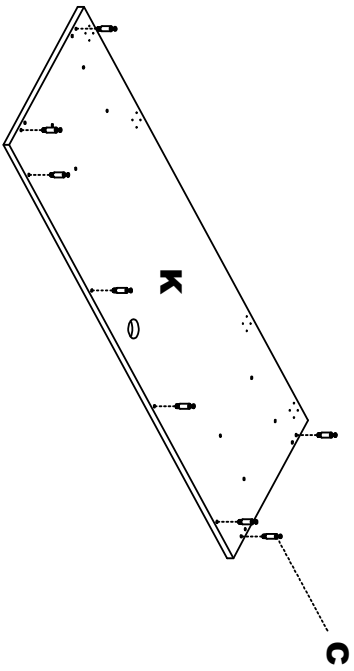2 Install Cam Posts (C) into threaded inserts in underside of Top (K).



4

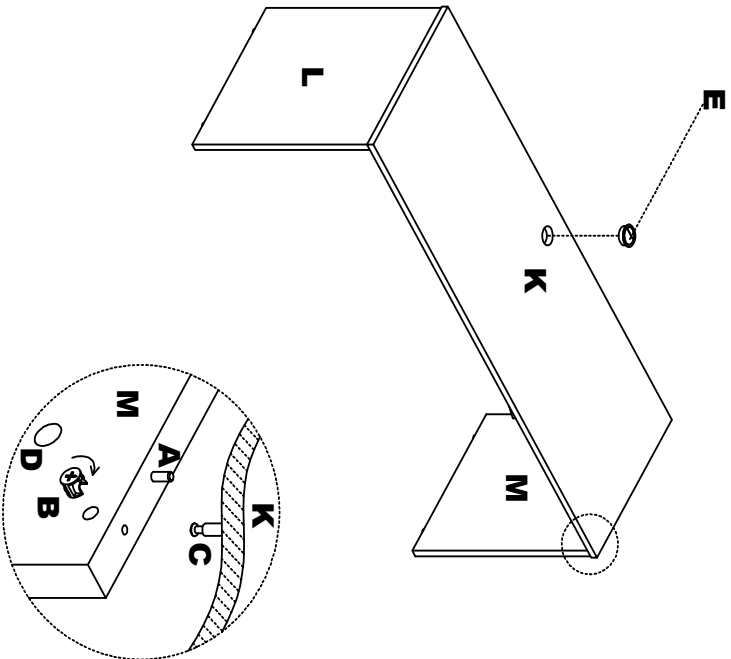3 Place Top (K) onto base and lock in place by turning Cam (B). Apply Cam Stickers (D) onto Cam (B) and Insert Grommet (E) into Top (K).



5