









Brighton Series™
Reception Counter
Model No. BTRDTC

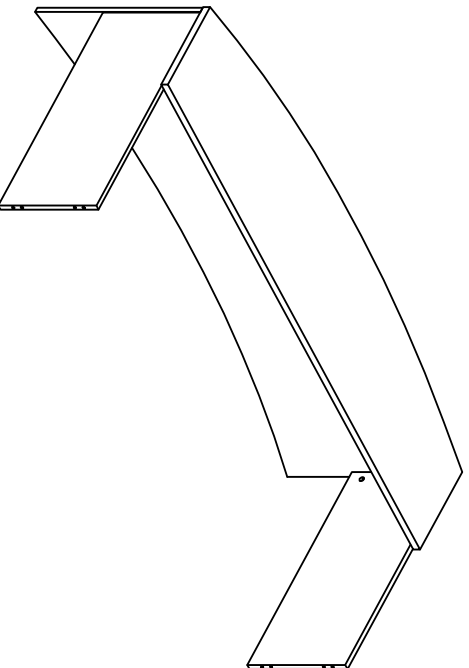



ASSEMBLY INSTRUCTIONS
CALL 1-800-822-8037 FOR ASSISTANCE



PARTS LIST

| Name | Part | Qty. | Spare Qty | Name | Part | Qty. | Spare Qty |
|----------|--|-----------|-----------|----------|--|----------|-----------|
| A |  REALS004 Wood Dowel | 6 | 1 | E |  REALBY006** Hole Plug 8mm | 4 | 1 |
| B |  REALS001 Cam | 12 | 1 | F |  REALBY007** Hole Plug 10mm | 4 | 1 |
| C |  REALS002 Cam Post | 12 | 1 | |  BTRDTCB | | |
| D |  REALBY005** Cam Sticker | 12 | 1 | | | | |

Items with HB are in hardware box.
**Denotes Color Code

PARTS LIST
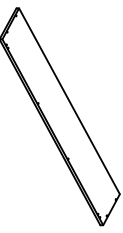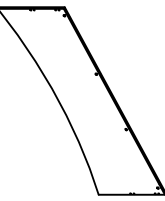
| Name | Part | Qty. |
|----------|--|----------|
| K |  BTRDTCK** Top Fascia | 1 |
| L |  BTRDTCL** Fascia | 1 |

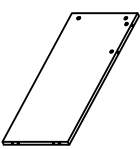
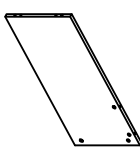
| Name | Part | Qty. |
|------------|---|----------|
| M1* |  BTRDTCSP** Right Side Panel | 1 |
| M2* |  BTRDTCSP** Left Side Panel | 1 |

***NOTE:** When ordering replacement Side Panels (BTRDTCSP**) you will receive both R.H. and L.H. Panels

**Denotes Color Code

2


1 Insert Wood Dowels (A) into ends of the Side Panels (M1 & M2). Insert Camms (B) into the Side Panels (M1 & M2). Install Cam Posts (C) into threaded inserts in Fascia (L). Attach Side Panels (M1 & M2) to Fascia (L) by turning Camms (B).

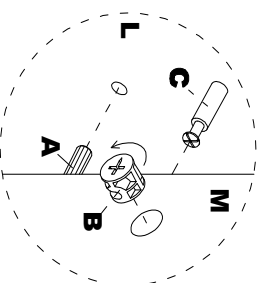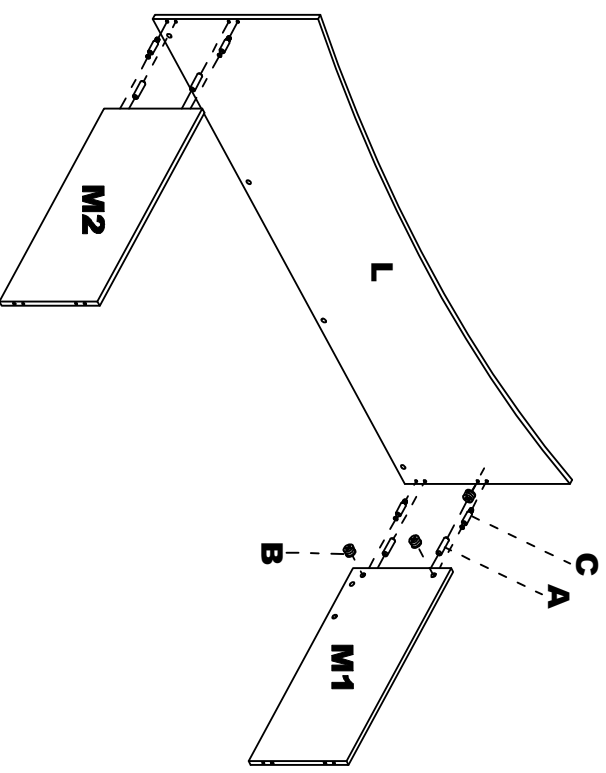

NOTE: The arrow on the face of the Cam (C) should point towards the Cam Post (B) for proper alignment.


3

2 Flip assembled frame and temporarily position onto the desk.

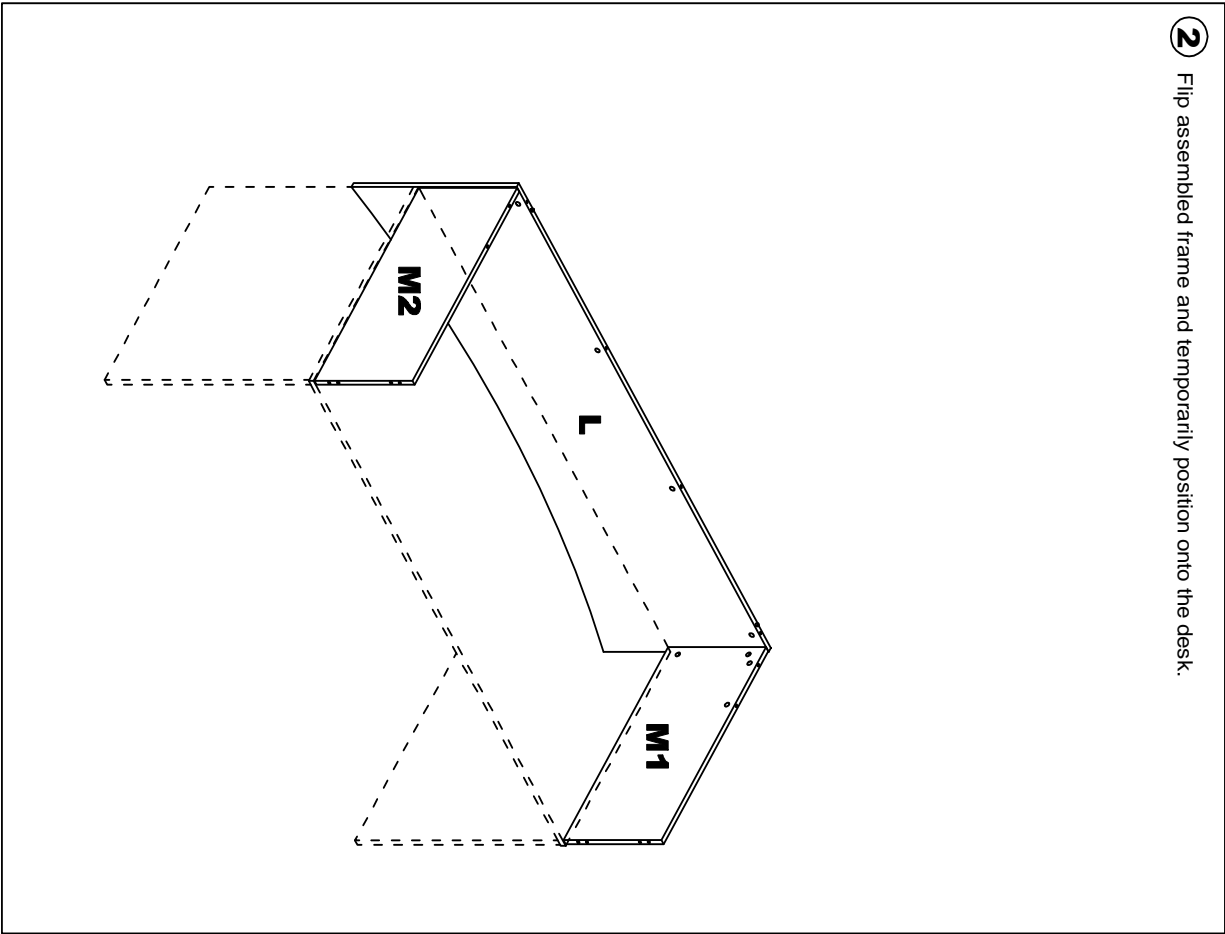

4

3 Install Cam Posts (C) into threaded inserts in underside of Top (K).

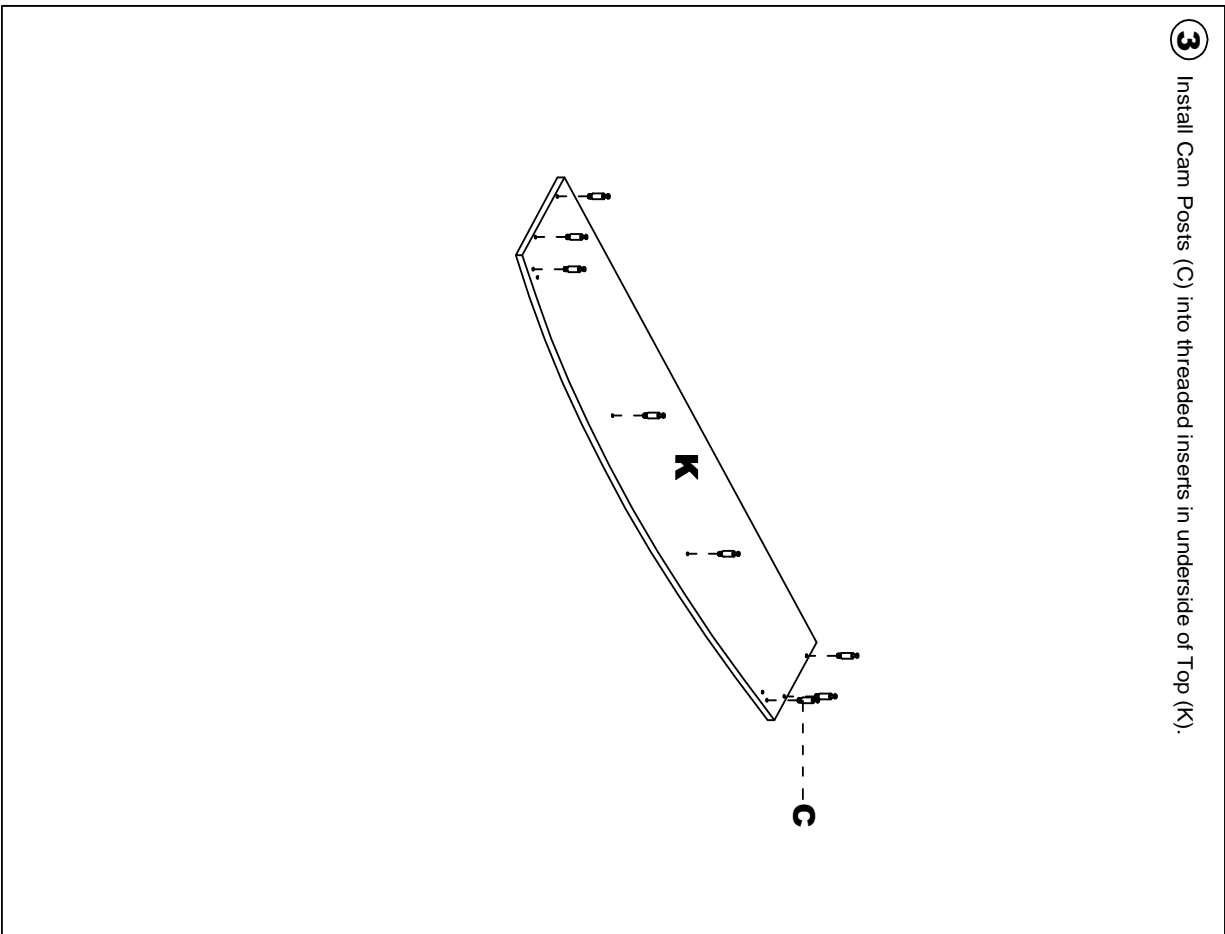

5

4

Insert Dowels (A) into edge of Fascia. Insert Cambs (B) into Fascia (L) and Side Panels (M1 & M2) by turning Cambs (B). Attach Top (K) to Fascia (L) and Side Panels (M1 & M2) by turning Cambs (B). Apply Cam Stickers (D) to Cambs (B). Install Hole Plugs (E & F) into holes on end of Side Panels (M1 & M2).

Tilt Reception Counter forward and remove protective backing from tape on bottom of Side Panels (M1 & M2). Center Reception Counter on Desk and press in place.

