




Tiffany Industries™
A MAYLINE GROUP COMPANY

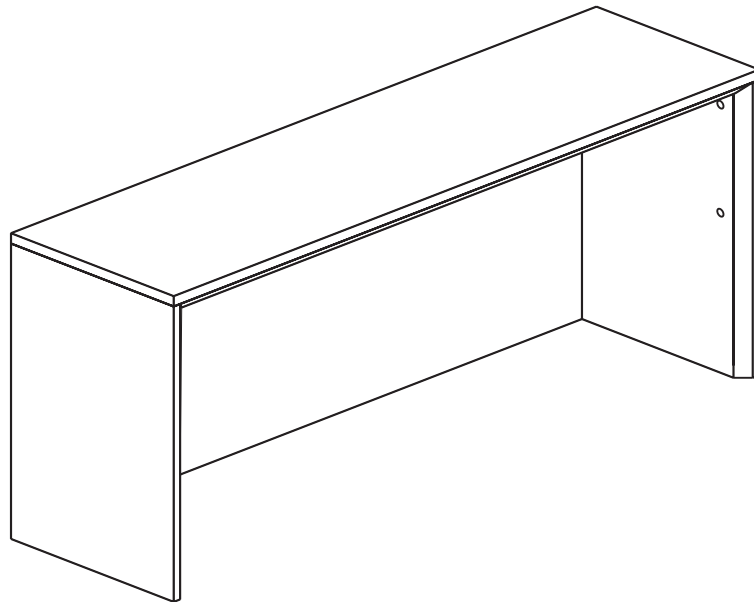





Corsica Credenza



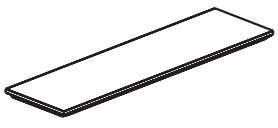
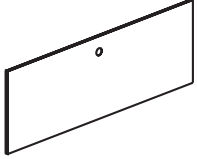

Model No's-CCNZ66/CCNZ72/CCNZ84



ASSEMBLY INSTRUCTIONS
CALL 1-800-822-8037 FOR ASSISTANCE


PARTS LIST

Name	Part	Qty.
A*	 HB REALS001 Cam Fastener	11
B*	 HB REALS002 Cam Cap	7
C*	 HB REALS004 Wood Dowel	8
D*	 HB REALS003 Cam Post	11
E*	 HB REALS006 Hole Plug	4
J*	 HB REALS153 Cap	4

Name	Part	Qty.
G1*	 Left Panel CCNZG1**	1
G2*	 Right Panel CCNZG2**	1
H*	 Top CCNZ~~H**	1
I	 Back Panel CCNZ~~ **	1
	 CCNZHB	


Items with HB are in the hardware bag
 *For Individual Items, Order By Part Number.
 ** Denotes Color Code
 ~~ Denotes Size (66, 72, 84)

1

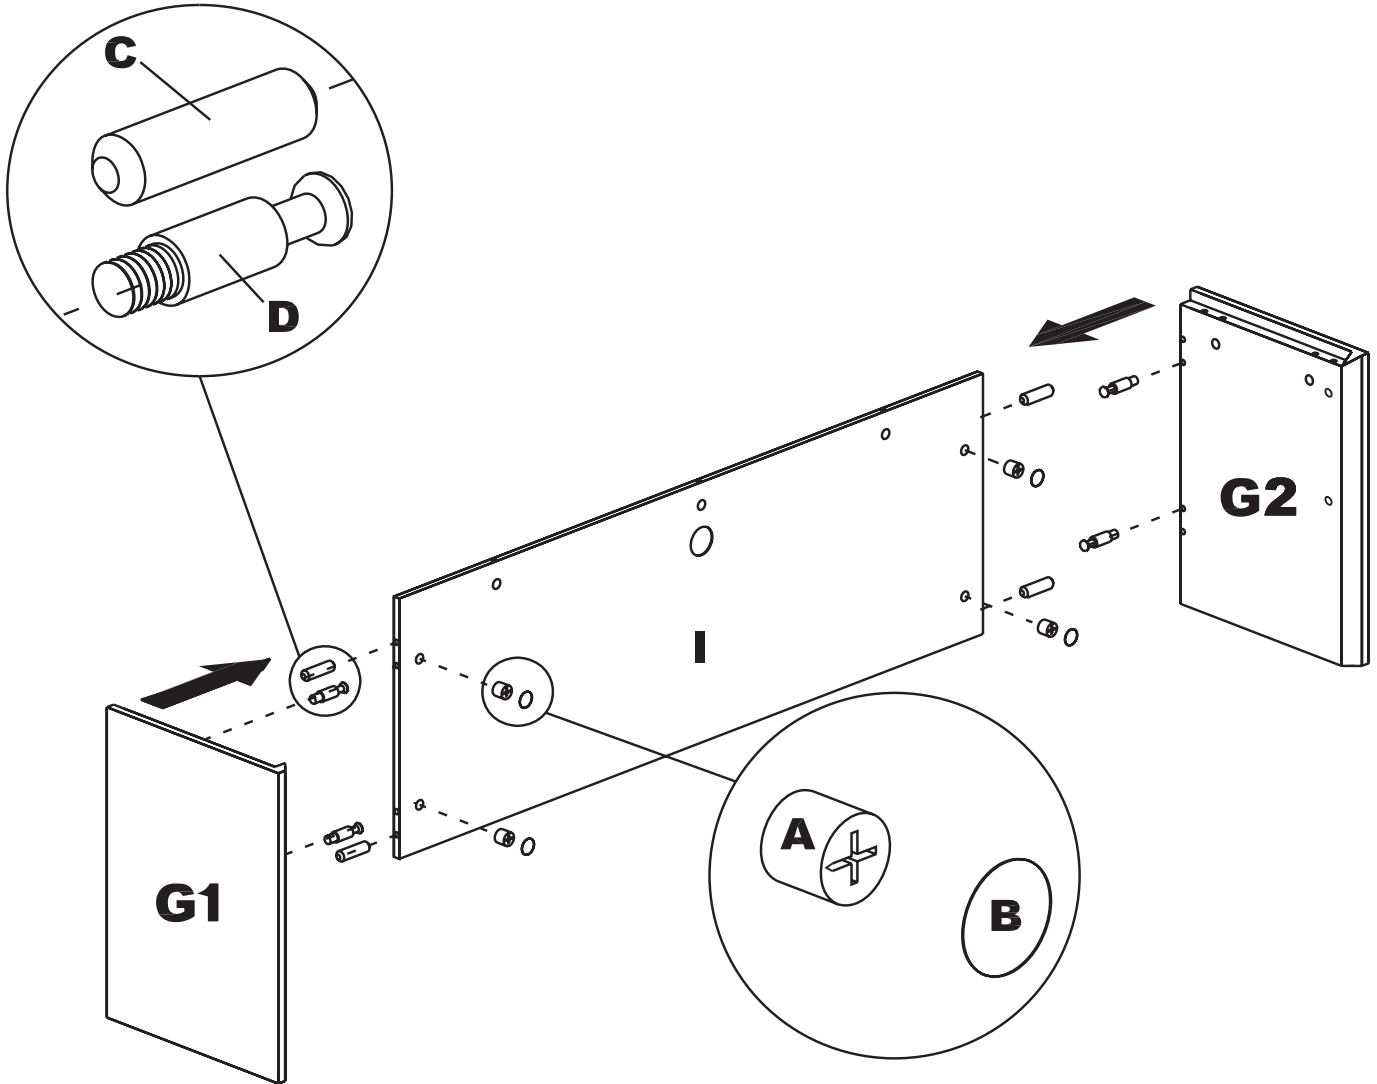


Note: For Step 1, dowels (C) are to be inserted into modesty panel (I) and not legs (G1/ G2).

2

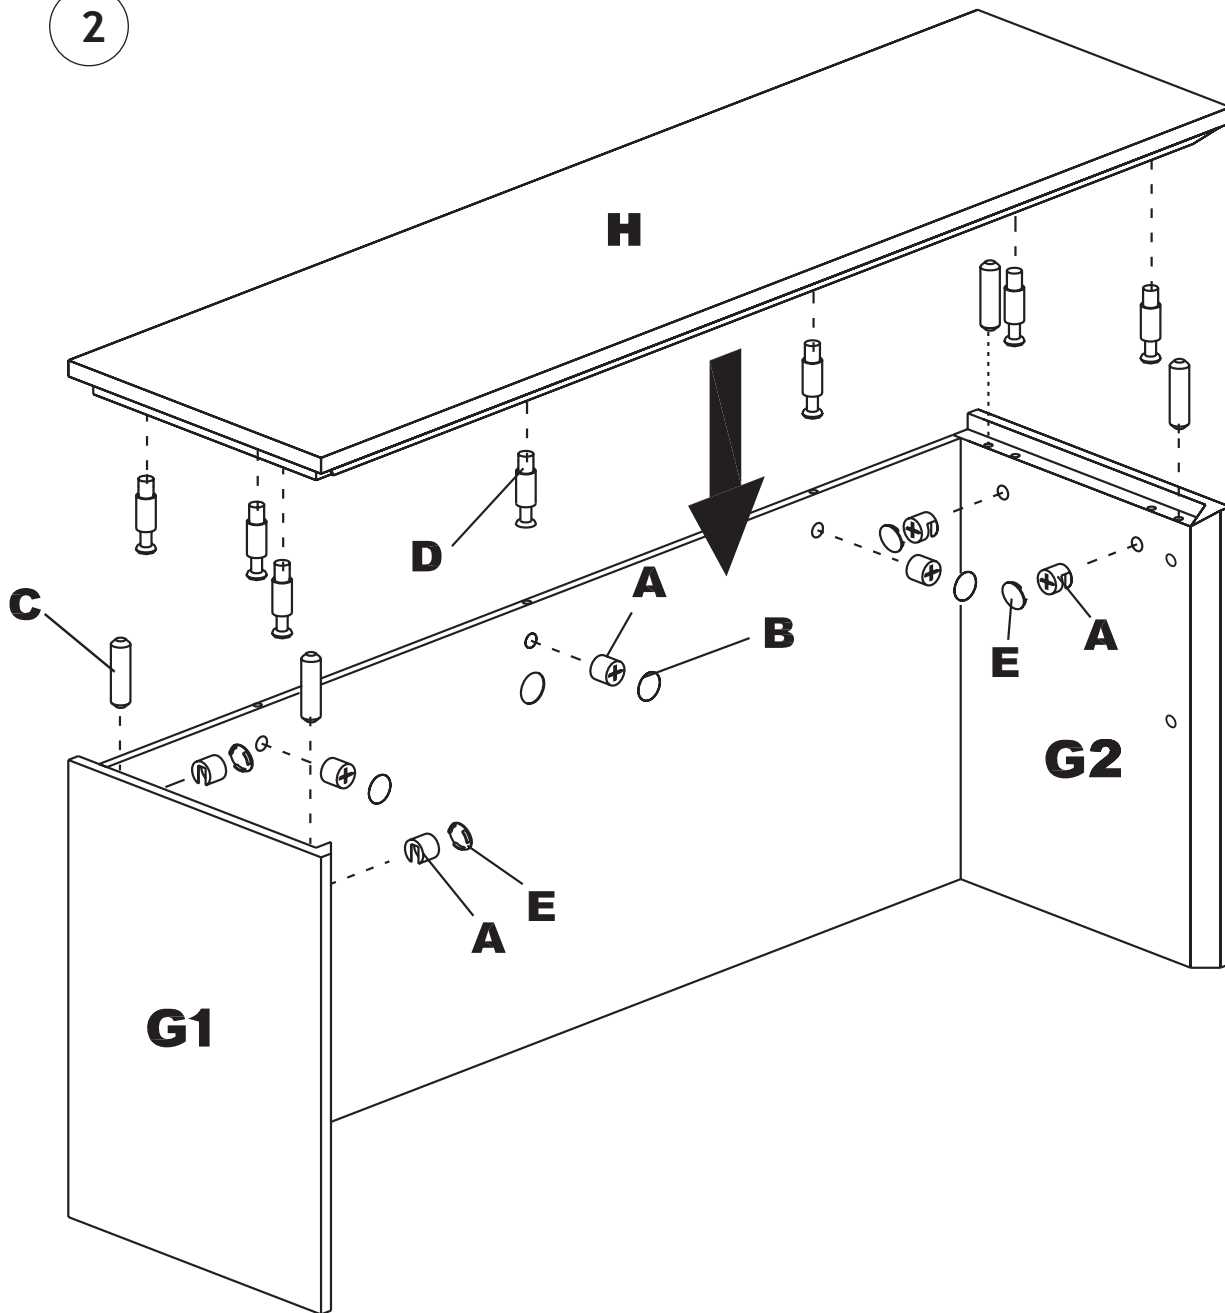


Note: For Step 2, dowels (C) are to be inserted into legs (G1/ G2) and not into top (H).


3

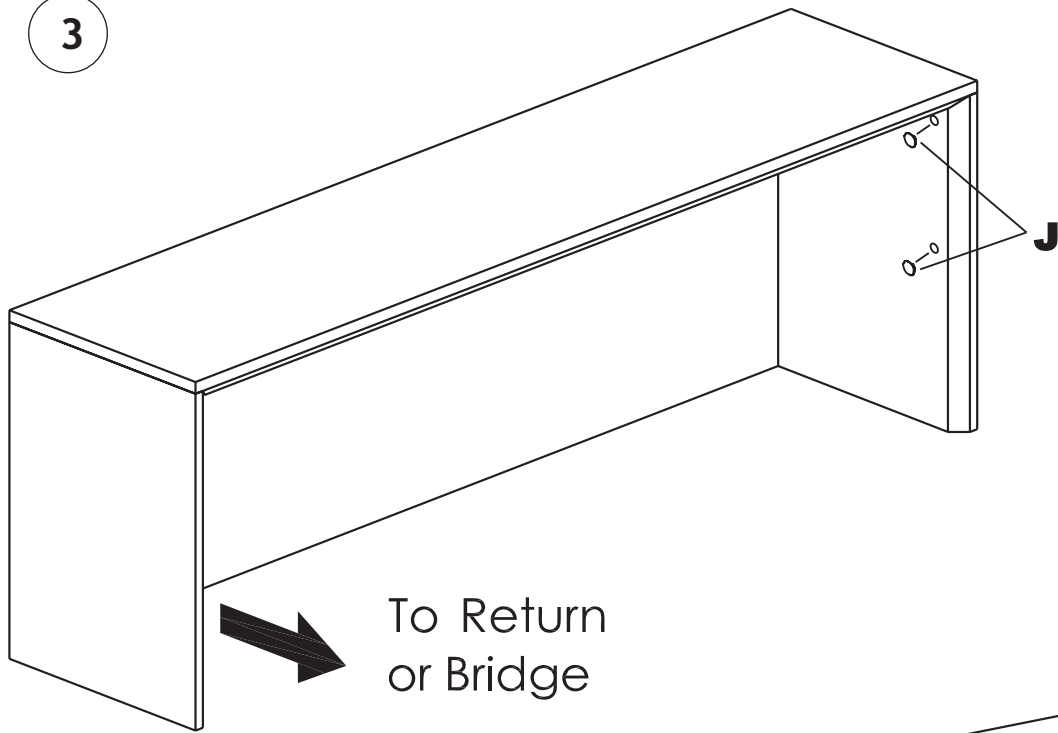

OR

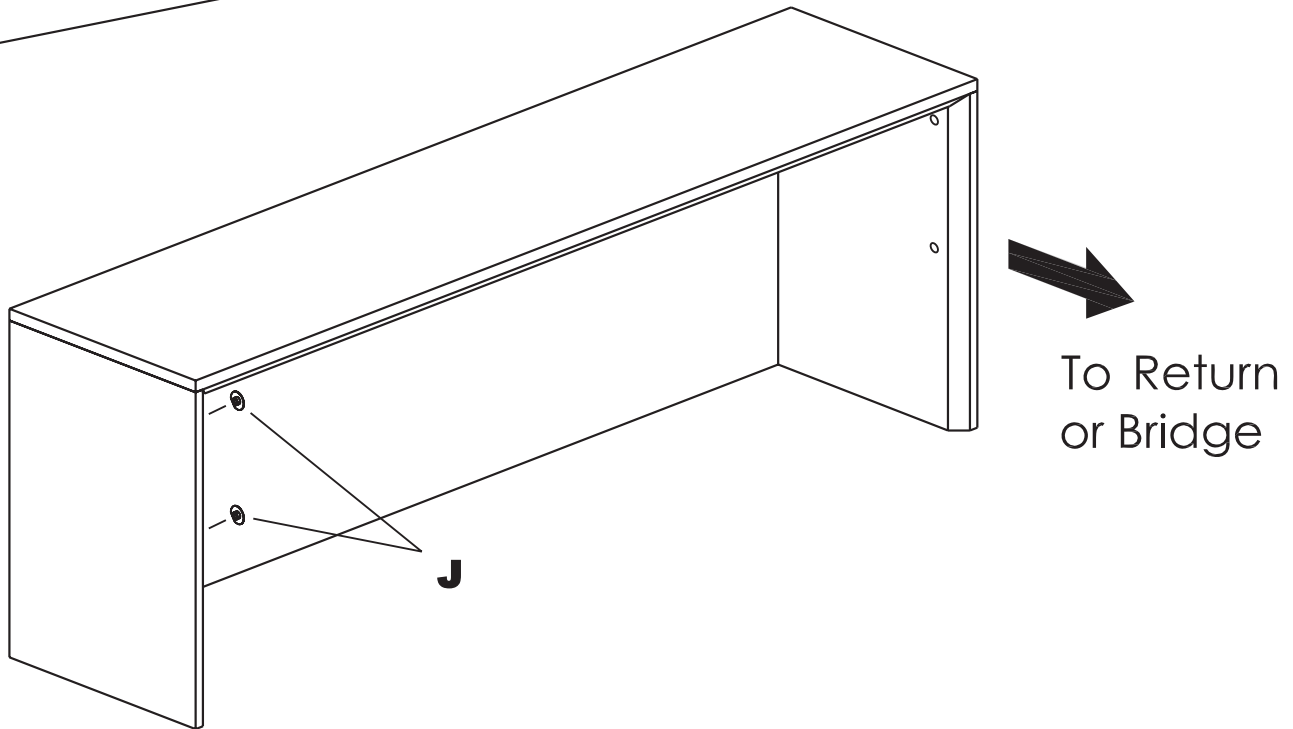

Pre-Assembled Replacement Part List

Replacement #	Part	Qty.
REALS067*	 Leveler w/ Insert	1

*For Individual Items, Order By Part Number.