






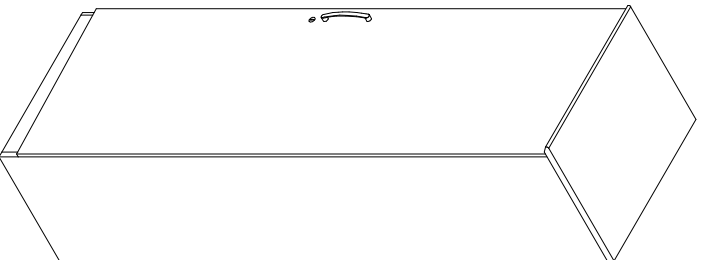





Wardrobe Cabinet, Right
Model No. VWRDR






ASSEMBLY INSTRUCTIONS
CALL 1-800-822-8037 FOR ASSISTANCE




PARTS LIST

Name	Part	Qty.	Spare Qty	Name	Part	Qty.	Spare Qty
A	REALS004 Wood Dowel  HB	24	1	F	REALS005 4mm x 16mm  HB	28	2
B	REALS003 Cam Post  HB	28	2	G	REALS006 Plug  HB	4	1
C	REALS001 Cam Fastener  HB	28	2	H	REALS009 Shelf Support Pin  HB	12	1
D	REALS002 Cam Cap  HB	28	2	J1	REALS010 Handle-Silver  HB	1	
E	REALS008 Lever w/ Bracket  HB	4		J2	REALS011 Handle-Black  HB	1	

Items with HB are in the hardware box.
** Denotes Color Code

PARTS LIST






Name	Part	Qty.	Spare Qty
K	REALS045 4x25mm  HB	2	
L	REALS012CC Lock Assembly  HB	1	
M	REALS016 4x16mm  HB	4	1





Name	Part	Qty.	Spare Qty
Q	REALS014 Coat Hanger 	1	
R	REALS015 Latch(Use S025)  HB	1	
S	REALS017 3.5x16mm  HB	2	

Items with HB are in the hardware box.
** Denotes Color Code

2





PARTS LIST

Name	Part	Qty.
T	VWRD ^T Bottom Panel 	1
U	VWRDU ^{**} Toe Kick 	1
V	VWRDV ^{**} Back Panel 	1
W	VWRDW ^{**} Fixed Shelf 	1
X1	VWRDRX1 ^{**} Left Side Panel 	1

Name	Part	Qty.
X2	VWRDRX2 ^{**} Right Side Panel 	1
Y	VWRDY ^{**} Top 	1
Z	VWRDZ ^{**} Adjustable Shelf 	3
a	VWRDRA ^{**} Door-Right 	1

** Denotes Color Code

3

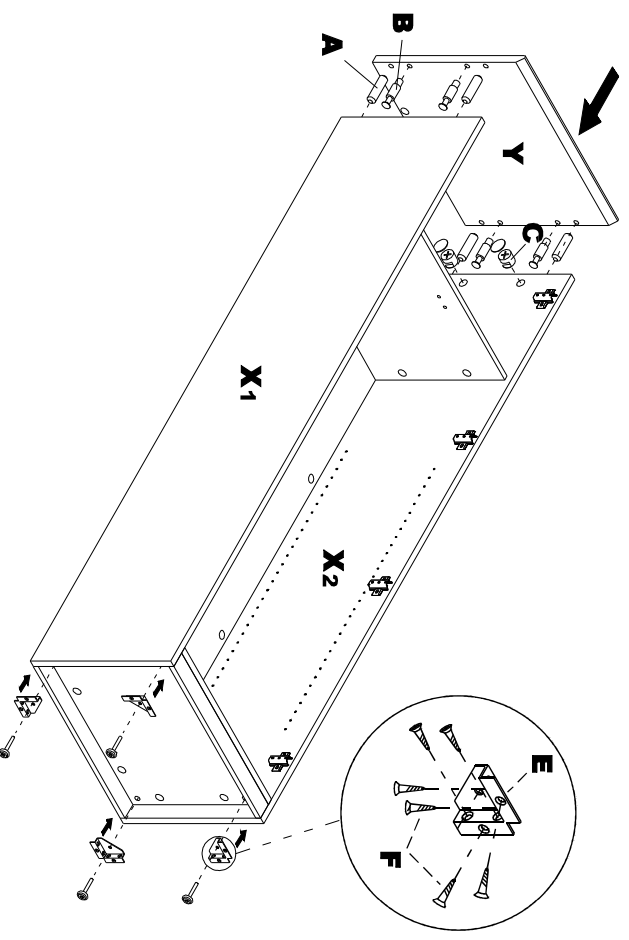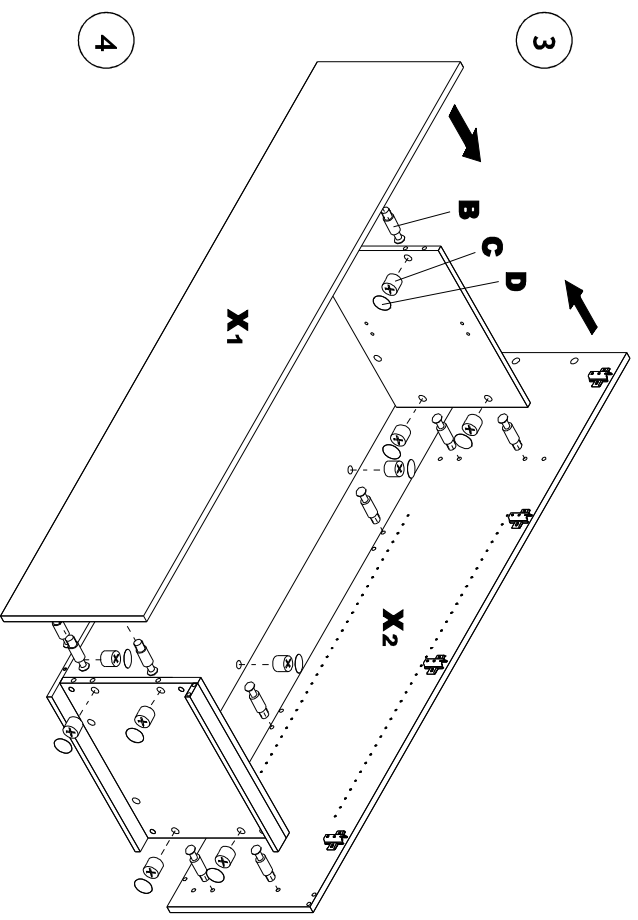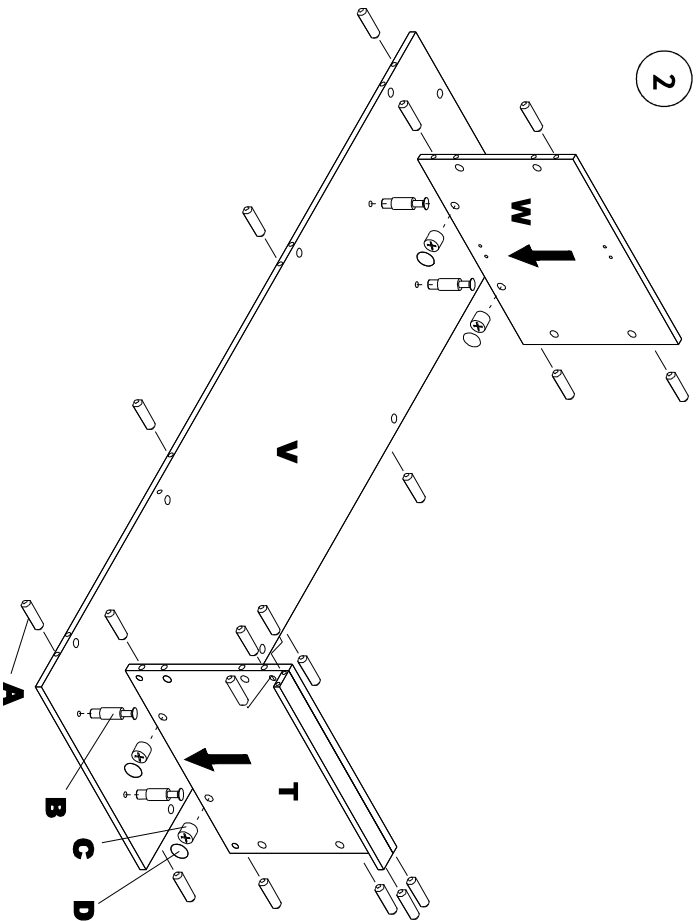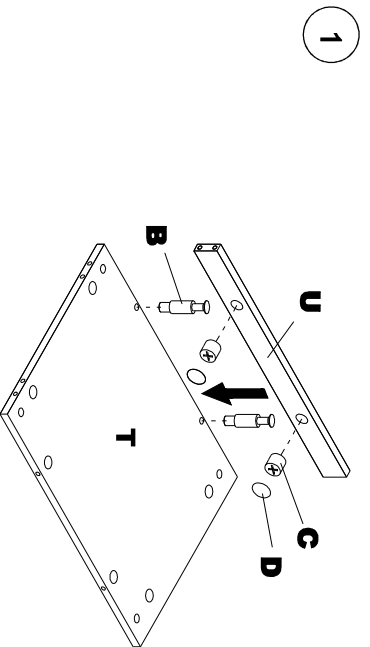


Note: For Step 2, dowels (A) are to be inserted into panels (T/V/W) and NOT in side panels (X1 / X2) in step 3.

4

Note: For Step 4, dowels (A) are to be inserted into side panels (X1/X2) and NOT in top (Y).


5

5

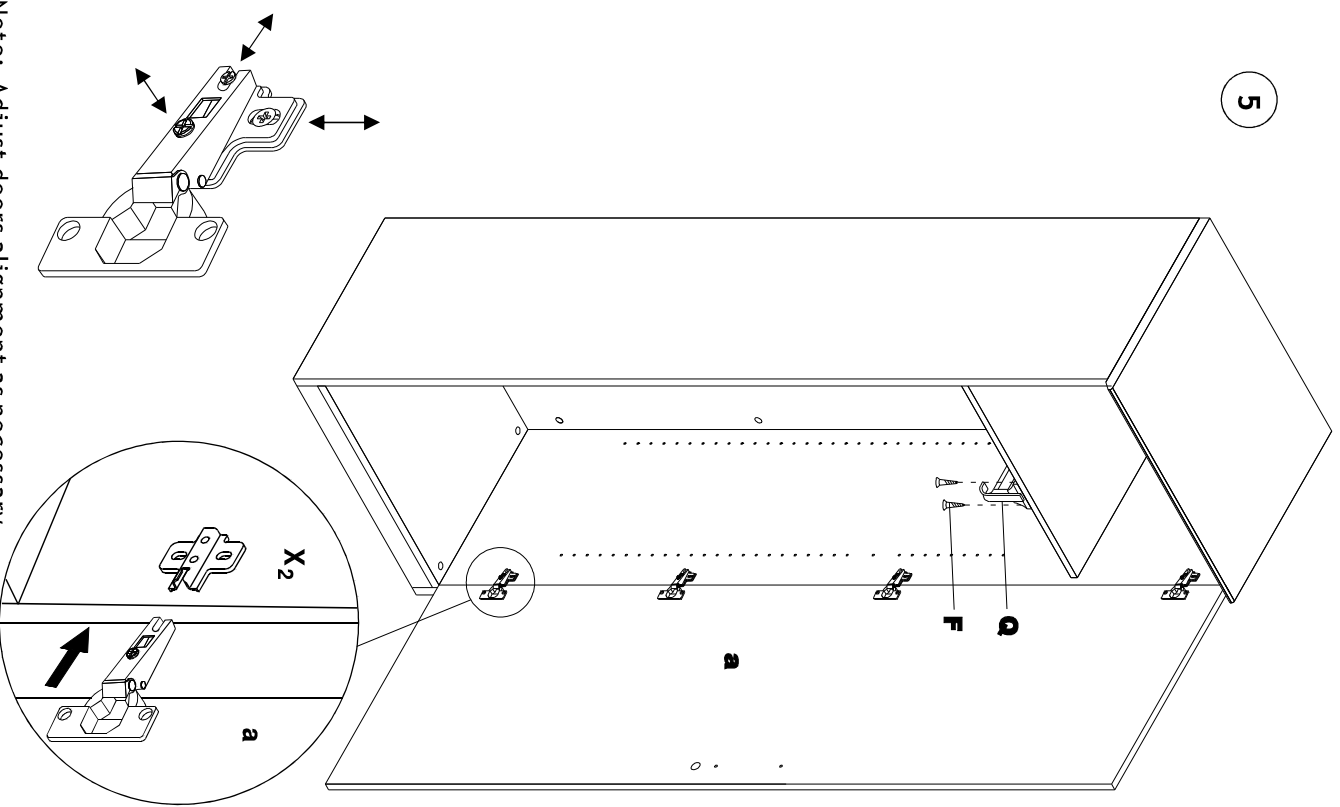


Note: Adjust doors alignment as necessary by using the adjustment screws on the hinges.

6

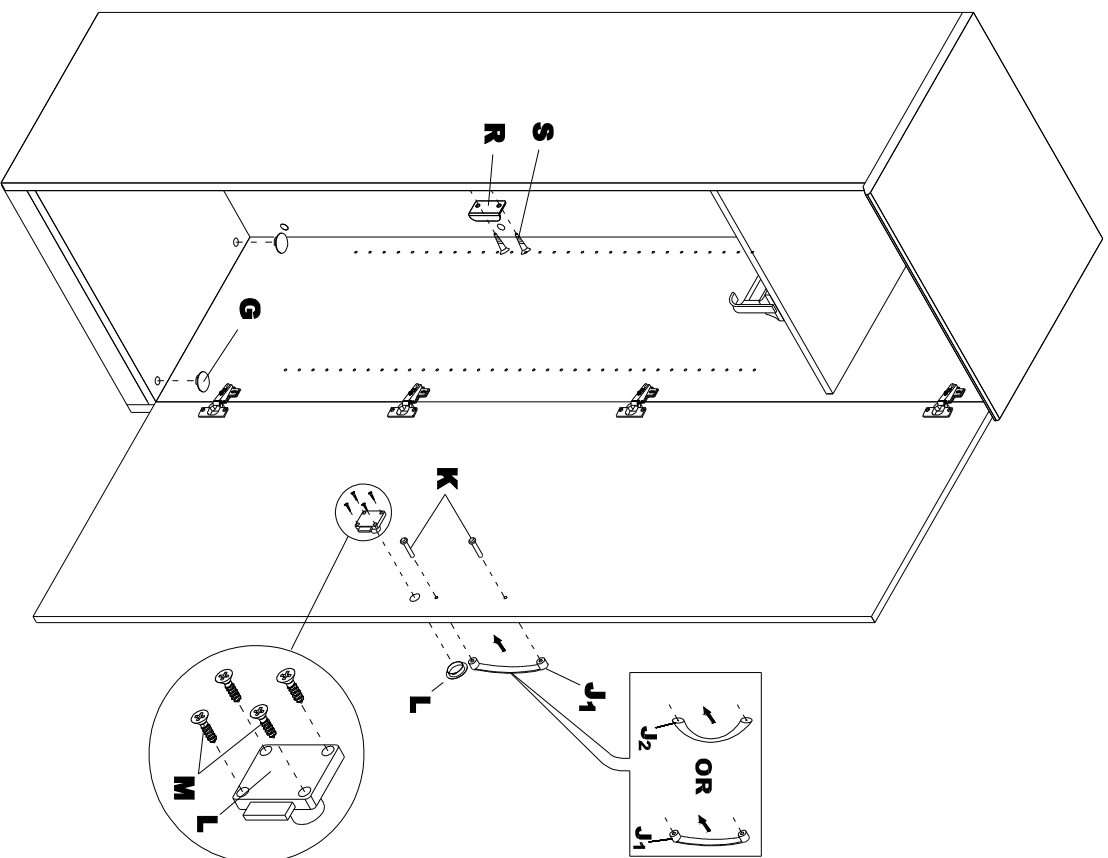


7

7

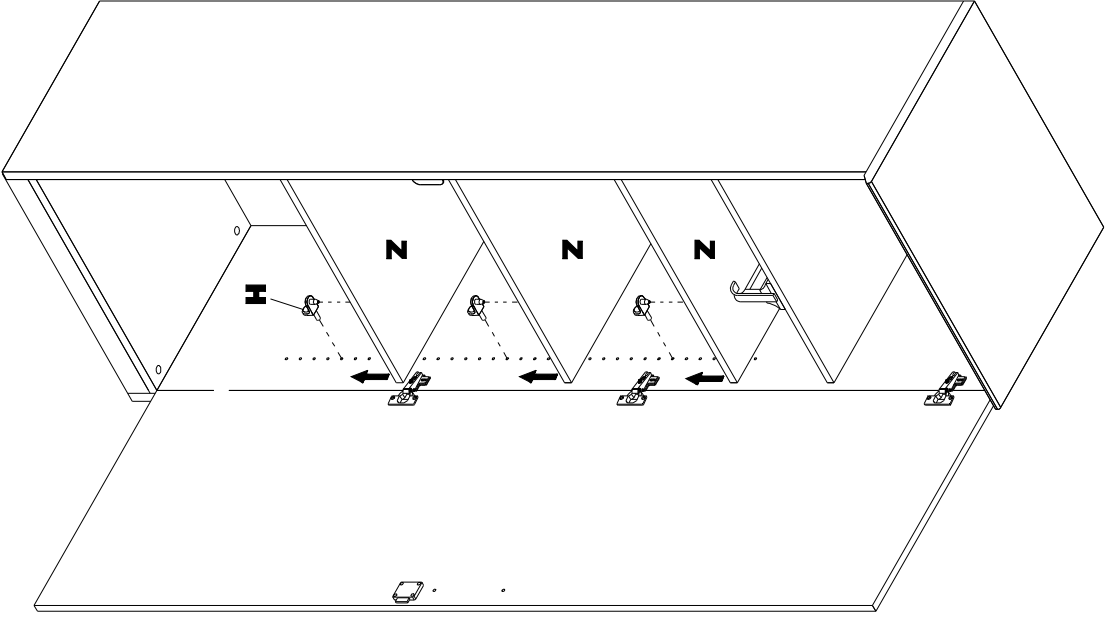


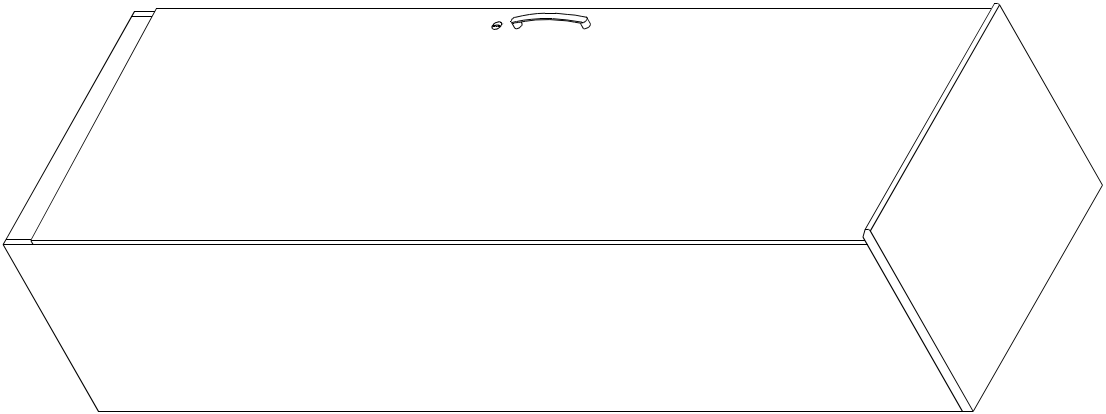

8



6

Pre-Assembled Replacement Part List

Replacement #	Part	Qty.
REALS013	 Hinge-Straight Arm	1
REALS013P	 Hinge Plate-Short	1
REALS018	 Hinge Screw 4 x 14mm	1

Real Office Care Instructions

Finish Color Matching

Different wood species offer unique texture and grain. Minor variations in finish color, density or shade may occur due to natural characteristics of wood. The term "color match" and consistency are often misleading. The best case achievable using a natural product like wood in a wide variety of lighting conditions is a good "blend" of color and tone throughout the project area. The natural color of the wood product is even altered by the application of a "clear" topcoat finish. The apparent consistency of the color is a combination of light reflectance, cellular structure, natural characteristics, applied colors and sheen. - Architectural Woodwork Quality Standards Illustrated, 7th Edition, Version 1.0, 1997, pg. 454

Proper Care of Wood Surfaces

With proper care of the wood surfaces and finishes, your office furniture will provide elegance and convenience for years. Please reference these easy-to-follow guidelines whenever you have a question.

- Clean all surfaces frequently with a soft cloth dampened with warm water, moving the cloth with the grain. **(Do not use furniture polish, solvents or any wax or oil base products.) Never use paper towel.**
- Immediately remove any liquids that come in contact with wood surfaces with a blotting action.
- Lift objects to move them; never pull them across the finished surface.
- Avoid exposure of furniture to extremes of heat and cold, or to wide humidity variances.
- For an additional safeguard, use a protective desk pad. This single item could ensure a lasting finish by protecting your furniture from possible damage caused by pens and sharp objects.
- Do not leave plastic, vinyl or rubber items on finished wood surfaces. Sustained contact may cause deterioration of the finish due to possible chemical reaction between the plastic, vinyl or rubber and the catalyzed lacquer finish.
- If using a protective glass top, place spacer pads under the glass top to allow the wood to breathe.
- Avoid exposure of furniture to strong sunlight. The wood underneath the finish may change color from prolonged exposure to sunlight.
- Avoid exposure of furniture to harsh solvents (nail polish remover, acetates, etc.), as it will cause finish deterioration.

If you have any additional questions please contact our customer service department at 1-800-822-8037

realoffice
by Mayline Group