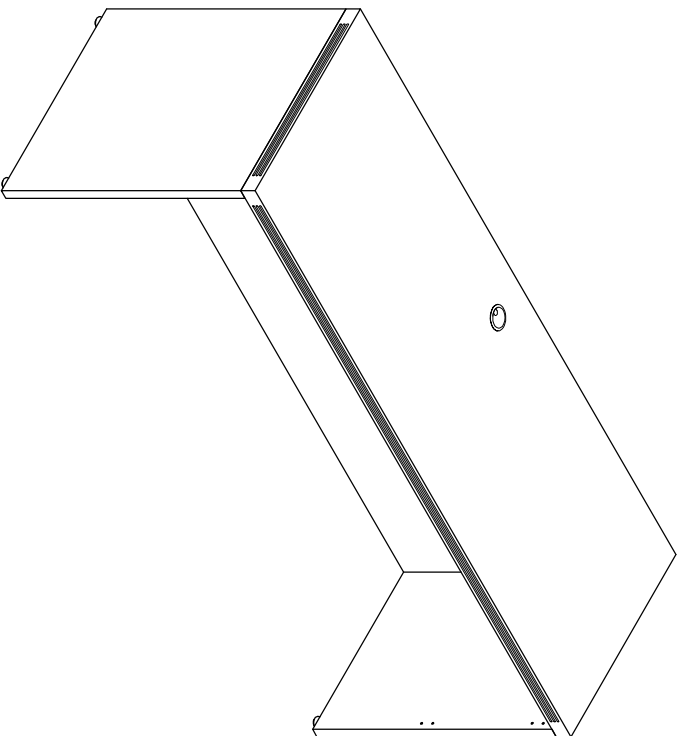


Aberdeen Series™
Credenza

Model No. ACD7224, ACD6624, ACD6024




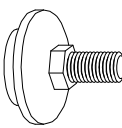





ASSEMBLY INSTRUCTIONS

CALL 1-800-822-8037 FOR ASSISTANCE

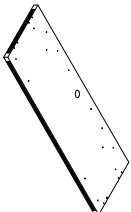


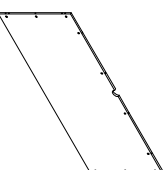
P/N **ACD24** REV 03 02/21/08

PARTS LIST

Name	Part	Qty.	Spare Qty	Name	Part	Qty.	Spare Qty
A	 REALS004 Wood Dowel HB	10	1	D	 REALS102** Cam Sticker HB	14	1
B	 REALS003 Cam Post HB	14	1	E	 REALS067 Leveler HB	4	
C	 REALS001 Cam Fastener HB	14	1	F	 REAL100 Grommet HB	1	
	 ARDHB						

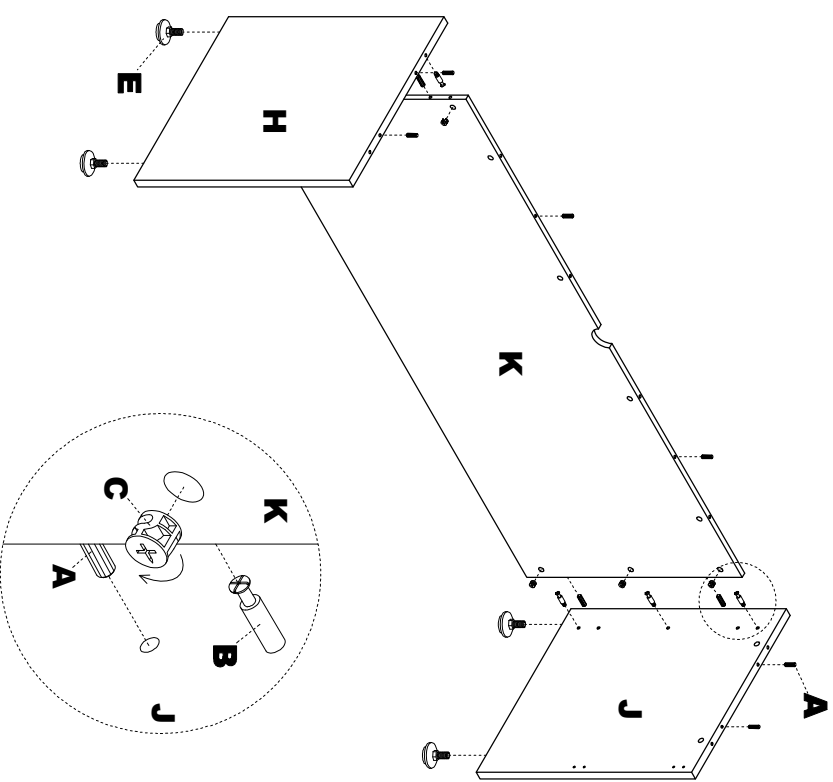
Items with HB are in hardware box.
**Denotes Color Code

PARTS LIST

Name	Part	Qty.	Name	Part	Qty.
G*	 ACD~24G** Top	1	J	 ACD24J** Right Side Panel	1
H	 ACD24H** Left Side Panel	1	K	 ACD~K** Modesty Panel	1

* Available in Cherry (LCR) or Mocha (LDC) finish only.
 **Denotes Color Code
 ~Denotes Size (72", 66" or 60")

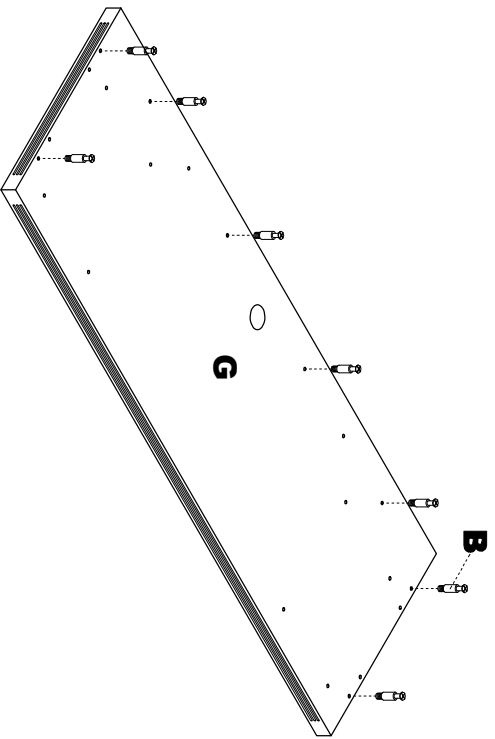
1 Insert Wood Dowels (A) into Modesty Panel (K) and the top of the Side Panels (H, J). Insert Cambs (C) into the Modesty Panel (K) and Side Panels (H, J). Install Cam Posts (B) into threaded inserts in Side Panels (H, J). Install Levelers (E) into bottom of Side Panels (H, J). Attach Modesty Panel (K) to Side Panels (H, J) by turning Cambs (C).



NOTE: The arrow on the face of the Cam (C) should point towards the Cam Post (B) for proper alignment.

2

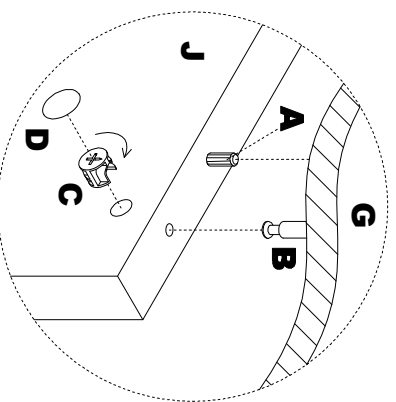
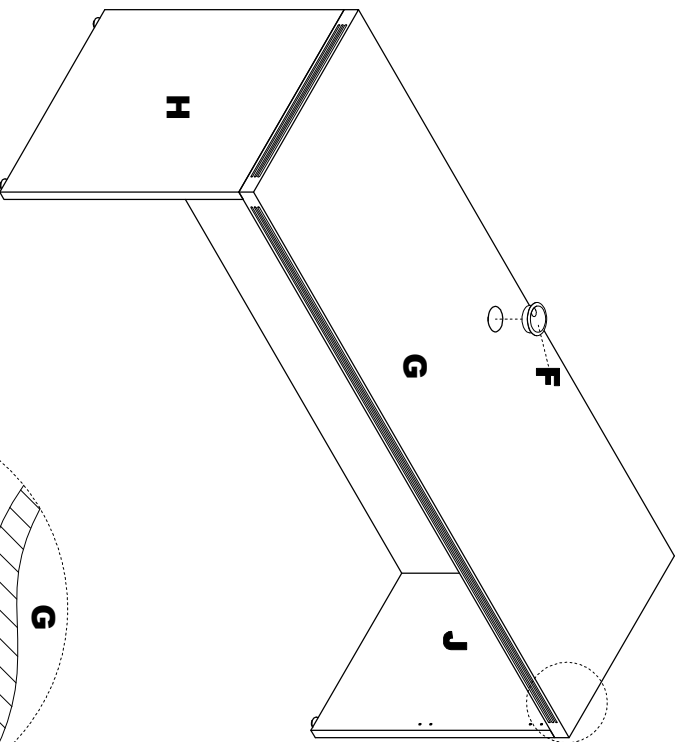
Install Cam Posts (B) into threaded inserts in underside of Top (G).



4

3

Place Top (G) onto base and lock in place by turning Cam (C). Apply Cam Stickers (D) onto Cams (C) and insert Grommet (F) into Top (G).



5