



ASSEMBLY INSTRUCTIONS

CSII CORNER DESK

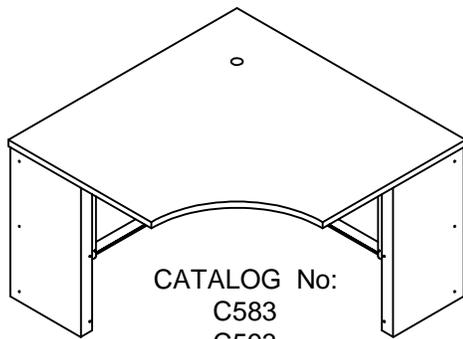

CATALOG No:
C583
C593
C603
C613

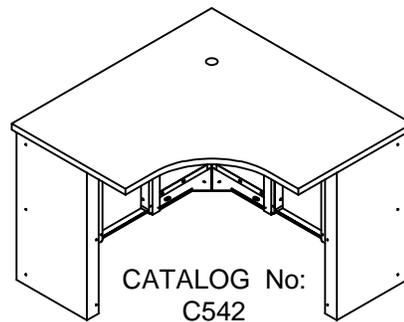

CATALOG No:
C542
C552
C562
C572


NOTE: Please count and inspect all pieces before disposing of any carton or packing materials.

COMPONENTS: When ordering components, specific color and/or size information may be required. Contact a Mayline Customer Service Representative. 1-800-822-8037

REF. #	QTY.	DESCRIPTION	PART No.	
1	1	WORK SURFACE	CALL~~**	
2	2	MODESTY PANEL	CALL~~**	** Denotes Color Code
3	1	LEG	C733**	~~Denotes Size
4	2	LEG (extra mounting holes)	C734**	
5	2	JOINING PLATE	B7522	

HARDWARE BAG (PART No. A7636) *for individual part, order that part number

REF. #	QTY	DESCRIPTION	PART No.
E1	26	#10 X 3/4 SCREW	X11*
E2	12	#10-24- X 3/8 SCREW	X147*
E3	12	#10-24 KEPS NUT	T2*
E4	4	CABLE CLAMP	F191*
E5	6	GLIDE	Q444*

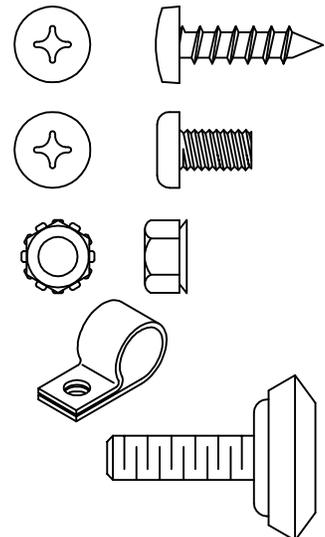



NOTE: Shape, size, and accessories may vary but assembly procedure remains the same. The legs included in this assembly are similar in appearance. Identify the two legs with extra mounting holes prior to beginning the assembly.

1. Place the Work Surface (1) face down onto a clean, protected surface.
2. Place Leg (3) in the corner of the Work Surface. NOTE: This is the Leg "without" the extra mounting holes. Position this Leg approximately 3/16 from the edges and align the holes in the Leg with the pre-drilled holes in the Work Surface. Attach the Leg with six Screws (E1). DO NOT tighten screws at this time.
3. Place Legs (4) at the edge of the Work Surface. Notice the position of the extra holes on the side of these Legs. These holes will be used to join the Corner Desk to the adjacent tables. Position these Legs approximately 3/16 from the edges and align the holes in the Legs with the pre-drilled holes in the Work Surface. Attach each Leg with six Screws (E1). DO NOT tighten screws at this time.
4. Attach the Modesty Panels (2) to each Leg with three Screws (E2) and three KEPS Nuts (E3) per end.
5. Tighten all screws at this time.
6. Install two Glides (E5) into each Leg.
7. Place the assembled Corner Desk in the upright position. MAYLINE recommends that a minimum of two people perform this task.
8. Place the Corner Desk and the adjacent tables at the location where the final assembly will be used. MAYLINE recommends that a minimum of two people perform these tasks.
9. Level the entire assembly by adjusting all of the glides.
10. Four Cable Clamps (E4) are included to position cables away from work area. Attach the clamps to the Work Surface with one Screw (E1) per clamp.

Corner Desk Assembly:

NOTE: Shape and size may vary but assembly procedure remains the same. Legs are specific to locations.

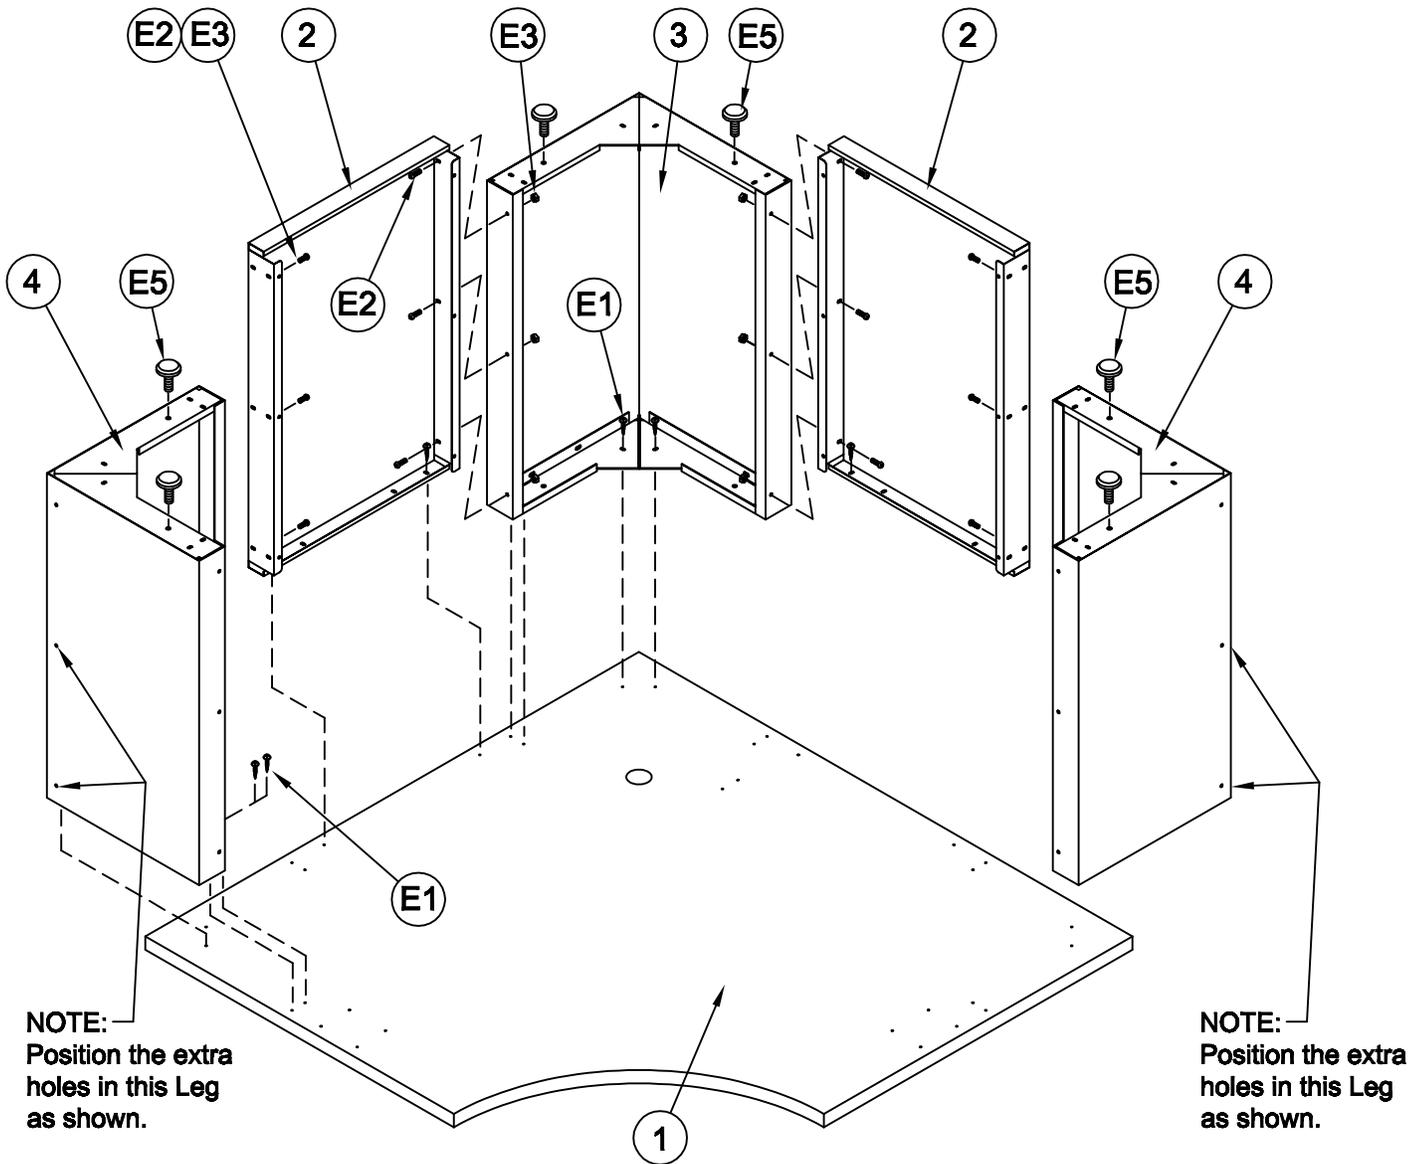

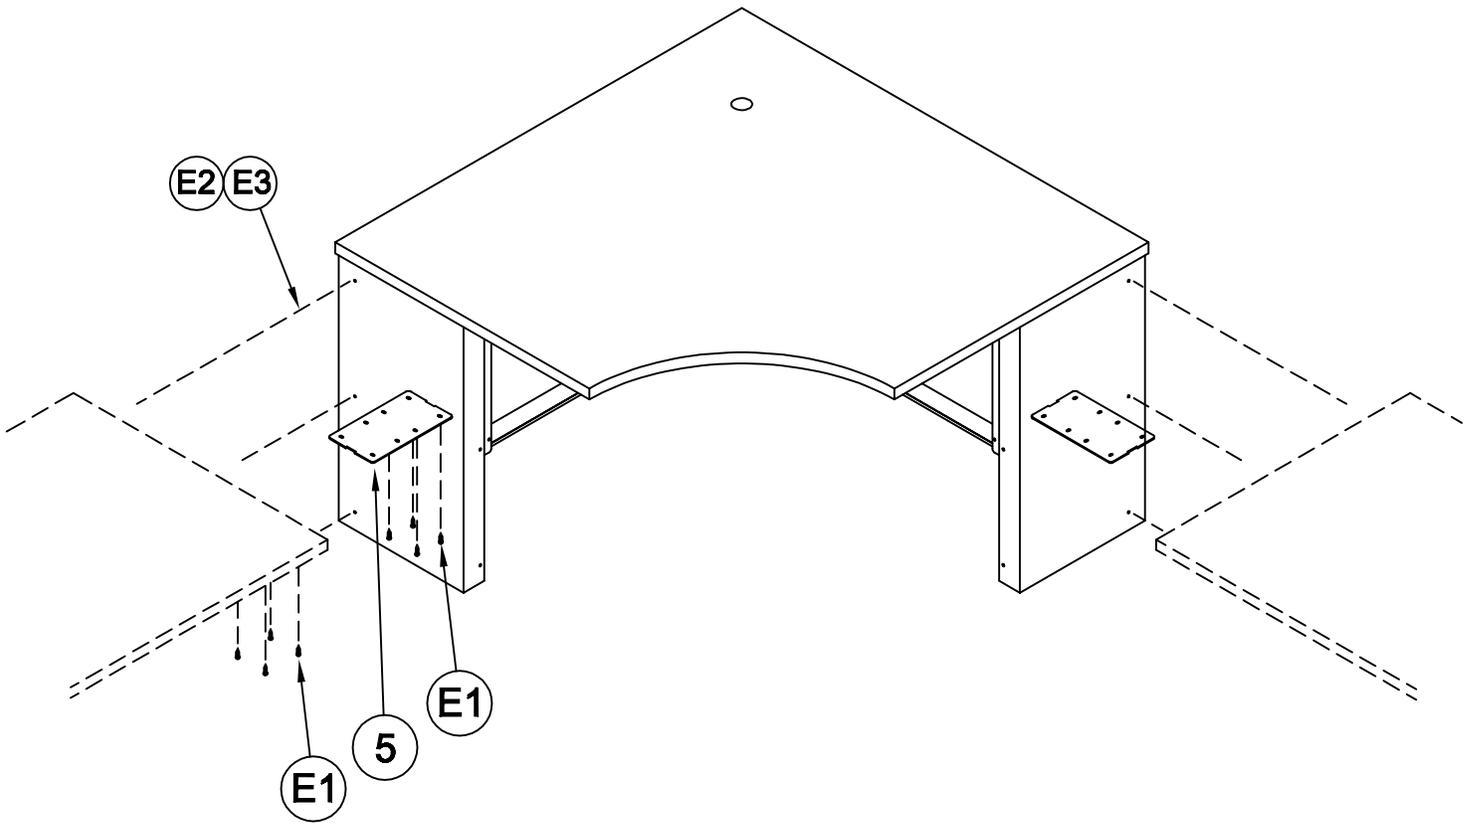

ASSEMBLY NOTATION:

When the Corner Table is used in conjunction with the Return table product. Secure the Corner to each Return using eight Screws (E1) through each Joining Plate (5) into the pre-drilled holes in the underside of each Work Surface. Secure each Corner Table Leg to each Return Modesty Panel using three Screws (E2) and three KEPS Nuts (E3).